


23. Keyless Entry Control Unit

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the glove box. <Ref. to EI-51, REMOVAL, Glove Box.>
- 3) Remove the screw, then remove the keyless entry control module while disconnecting the connector.

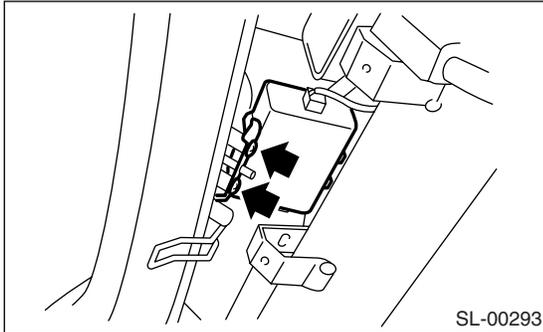

B: INSTALLATION

Install in the reverse order of removal.