


Electrical Component Location

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

3. Electrical Component Location

A: LOCATION

1. ENGINE COMPARTMENT

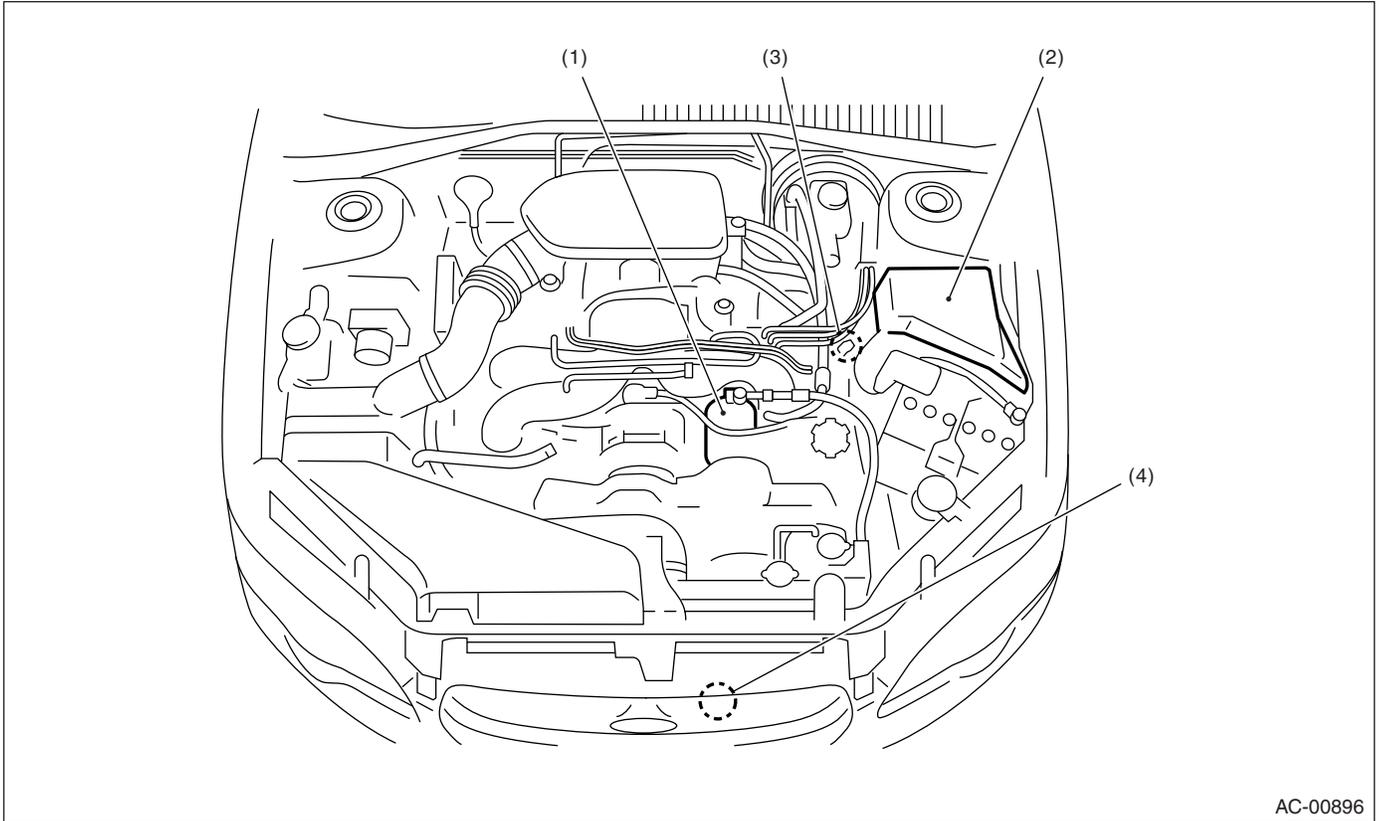


AC-00896


(1) A/C compressor
(2) A/C relay

(3) Pressure switch

(4) Ambient sensor

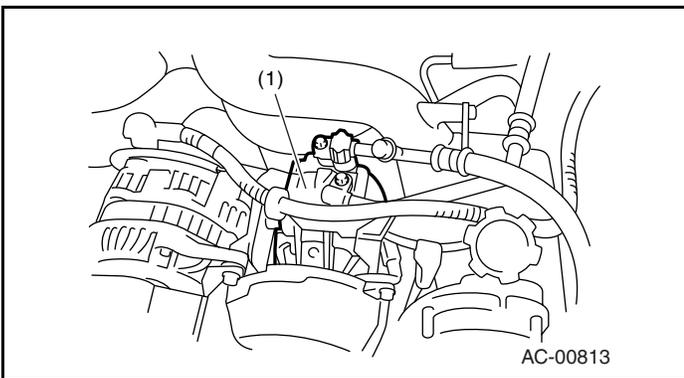



AC-00813

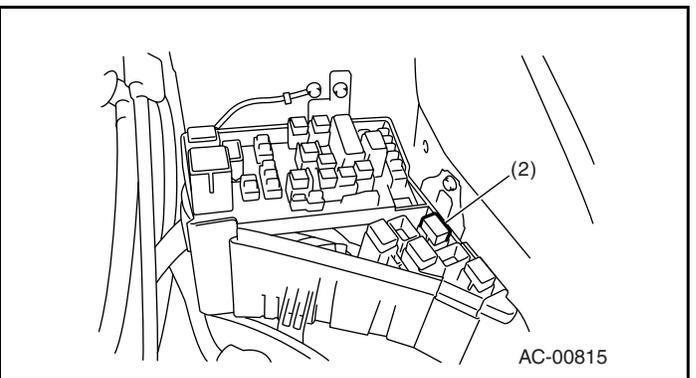


AC-00815

Electrical Component Location



HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

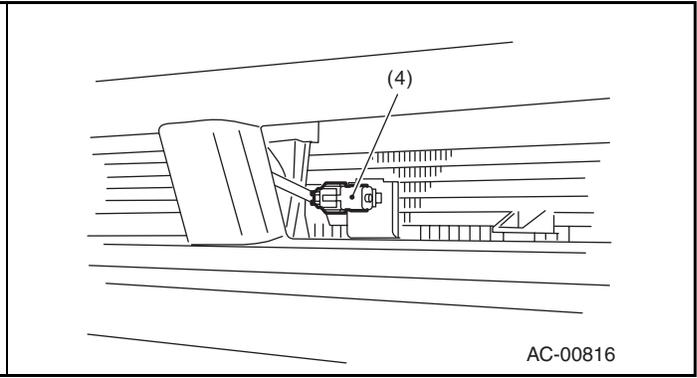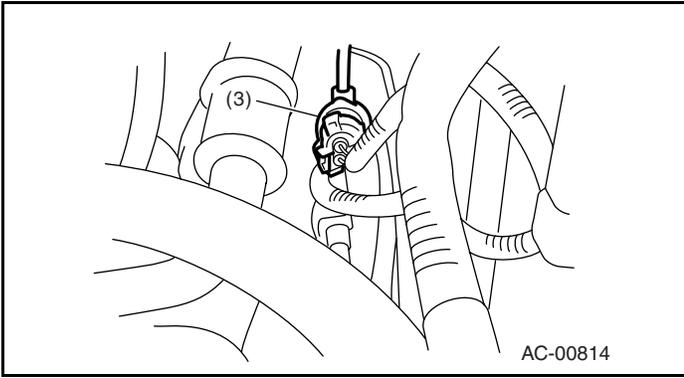

2. PASSENGER COMPARTMENT

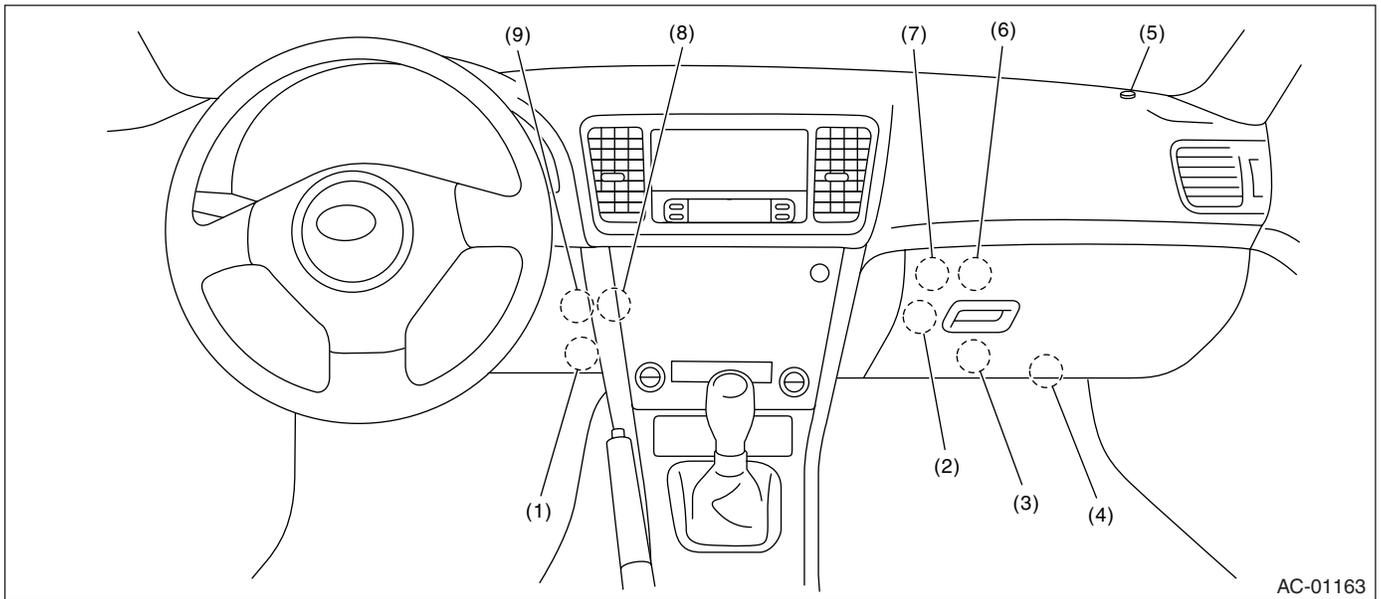

- | | | |
|--|--------------------------|---|
| (1) Evaporator sensor | (4) Blower motor | (7) Mode door actuator |
| (2) Passenger's side air mix door actuator | (5) Sunload sensor | (8) In-vehicle sensor |
| (3) Auto A/C control module | (6) Intake door actuator | (9) Driver's side air mix door actuator |

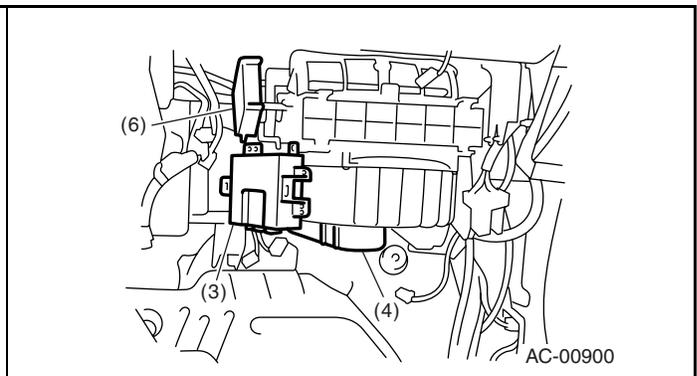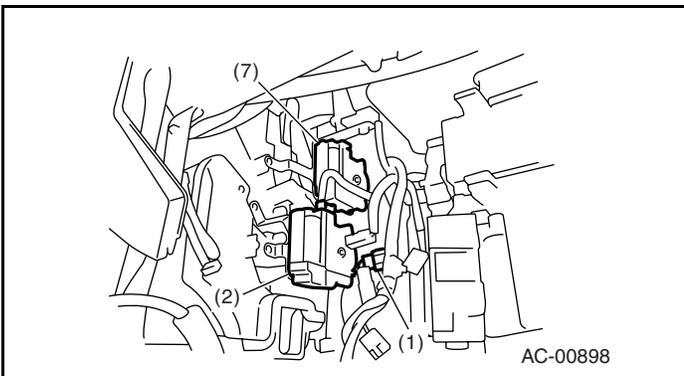

Electrical Component Location

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

