

# Wastegate Control Solenoid Valve


FUEL INJECTION (FUEL SYSTEMS)

---


## 16. Wastegate Control Solenoid Valve

### A: REMOVAL

- 1) Remove the collector cover.
- 2) Disconnect the ground cable from battery.

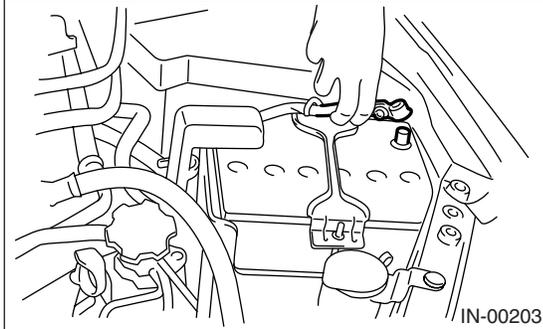

- 3) Disconnect the connector from wastegate control solenoid valve (A).
- 4) Disconnect the pressure hose (B) from wastegate control solenoid valve.
- 5) Remove the wastegate control solenoid valve from bracket.

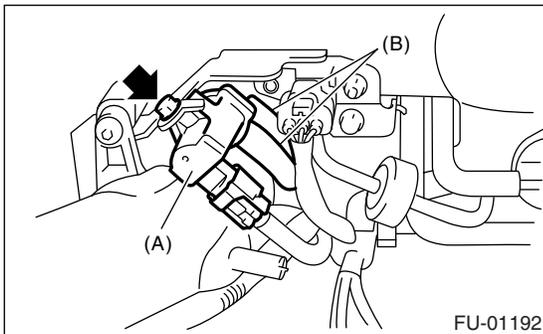

### B: INSTALLATION

Install in the reverse order of removal.

#### **Tightening torque:**

**6.5 N·m (0.66 kgf-m, 4.8 ft-lb)**