

# Heater Core


HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

---


## 11.Heater Core

### A: REMOVAL

- 1) Remove the heater and cooling unit. <Ref. to AC-37, REMOVAL, Heater and Cooling Unit.>
- 2) Remove the screws and remove the heater core cover and pipe clamp.

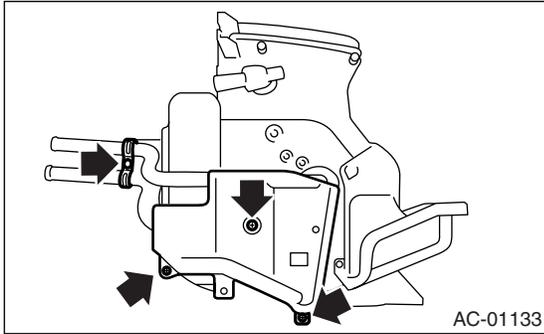

- 3) Remove the heater core (A).

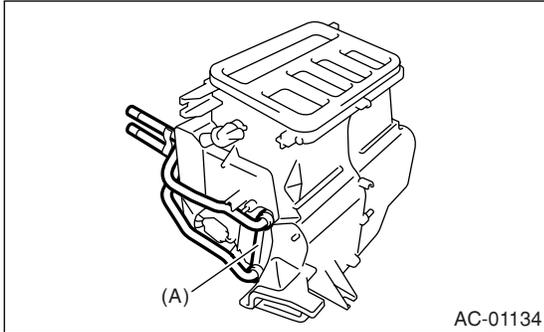

### B: INSTALLATION

Install in the reverse order of removal.