


10. Antenna Amplifier

A: REMOVAL


1. SEDAN MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear quarter trim. <Ref. to EI-62, SEDAN MODEL, REMOVAL, Rear Quarter Trim.>
- 3) Disconnect the harness connectors and terminals.
- 4) Remove the curtain airbag module. <Ref. to AB-20, REMOVAL, Curtain Airbag Module.>
- 5) Remove the screw and detach antenna amplifier.

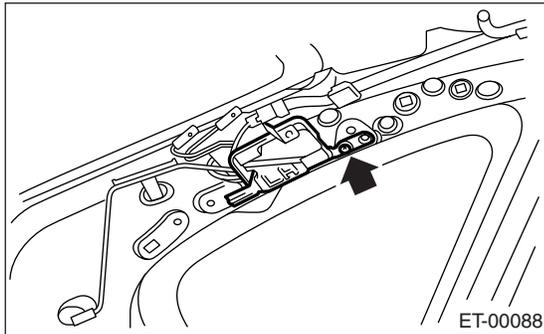

2. WAGON MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear gate trim. <Ref. to EI-68, REMOVAL, Rear Gate Trim.>
- 3) Disconnect the harness connectors and terminals.
- 4) Remove the screw and detach antenna amplifier.

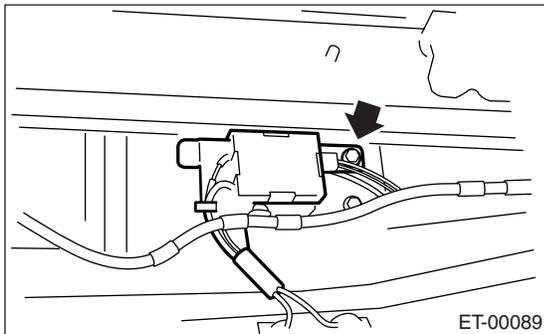


B: INSTALLATION

Install in the reverse order of removal.


C: INSPECTION

Measure the resistance of antenna amplifier.

- Sedan model

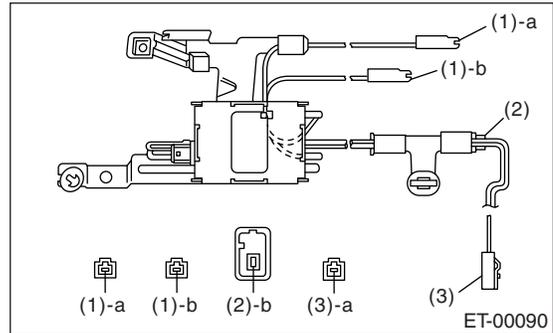

- Wagon model

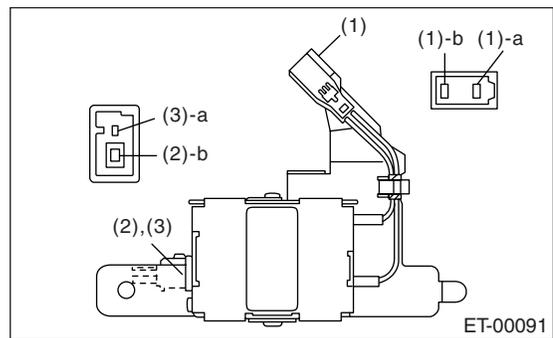

Terminal No.	Standard
(1)-a and Amplifier body	More than 10 kΩ
(1)-b and Amplifier body	More than 10 kΩ
(2)-b and Amplifier body	More than 10 kΩ
(3)-a and Amplifier body	More than 10 kΩ