

# Bulkhead Wiring Harness (In Engine Compartment)

WIRING SYSTEM

## 51. Bulkhead Wiring Harness (In Engine Compartment)

### A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B3	5	★	B-2		Mass air flow sensor
B6	2	★	B-2		Front ABS wheel speed sensor RH
B8	5	★	B-4		Front wiper motor
B10	4	★	B-4		A/C pressure switch
B11	20	Gray	B-3	T4	Transmission (AT model)
B12	8	★	B-3	T3	Transmission (AT and H4 model)
	12	★	B-3	T3	Transmission (AT and Turbo and H6 model)
B14	1	Black	B-3		Stater (magnet)
B15	2	★	B-4		Front ABS wheel speed sensor LH
B16	2	Gray	B-4		Brake fluid level switch
B18	4	★	B-3		Front oxygen sensor
B19	4	★	B-2	T5	Rear oxygen sensor cord (H4 model)
B20	16	★	B-3	E1	Engine wiring harness
B21	54	★	B-3	E2	
B22	16	★	B-3	E3	Engine wiring harness (H6 model)
B24	2	★	B-3	T1	Back-up light switch (MT model)
B25	2	Brown	B-4	T2	Neutral position switch (MT model)
B143	20	★	B-4		Main fuse box (M/B)
B144	9	Brown	B-4		
B145	7	Brown	B-4		
B146	2	★	C-4		Front washer motor
B147	2	★	C-4		Rear washer motor
B186	8	★	B-4		Main fuse box (M/B)
B262	4	★	B-4		Front oxygen sensor RH (H4 model)
B301	26	★	B-2		ABS control module
B310	42	★	B-2		VDC control module
B312	2	★	B-2	B347	Shield joint connector (VDC)
B347	2	★	B-2	B312	
B348	3	★	B-2		Pressure sensor
B360	16	Gray	B-4	F109	Through joint connector
B361	14	★	B-4	F108	
B391	4	★	B-2		Neutral position switch (MT model)
B392	2	★	B-3		Exhaust gas temperature sensor
B395	6	Gray	B-3		A/F sensor (H4 model)


★: Non-colored

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB13	2	★	C-3		Front sub sensor LH
AB16	2	★	B-1		Front sub sensor RH

★: Non-colored

# Bulkhead Wiring Harness (In Engine Compartment)

WIRING SYSTEM

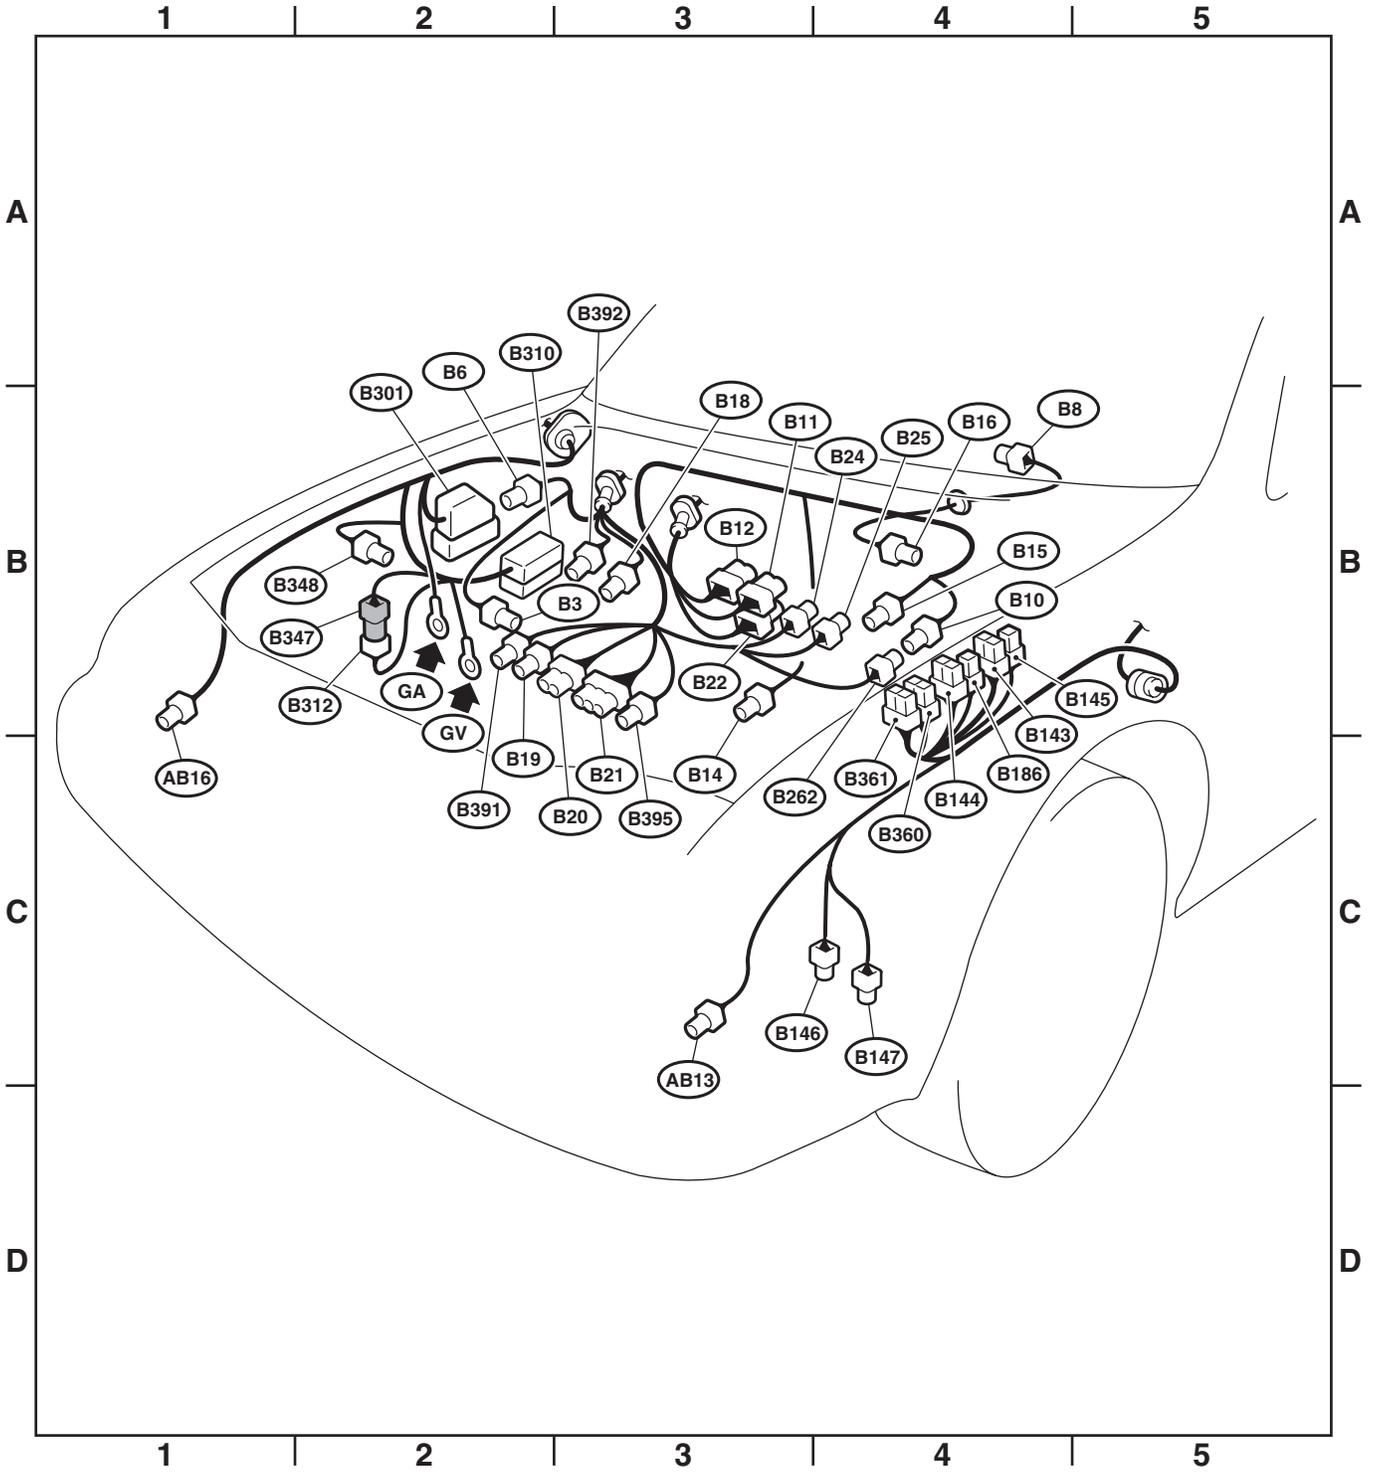

WI-05431