


CRUISE CONTROL SYSTEM

1. General Description

A: COMPONENT


1. NON-TURBO MODEL

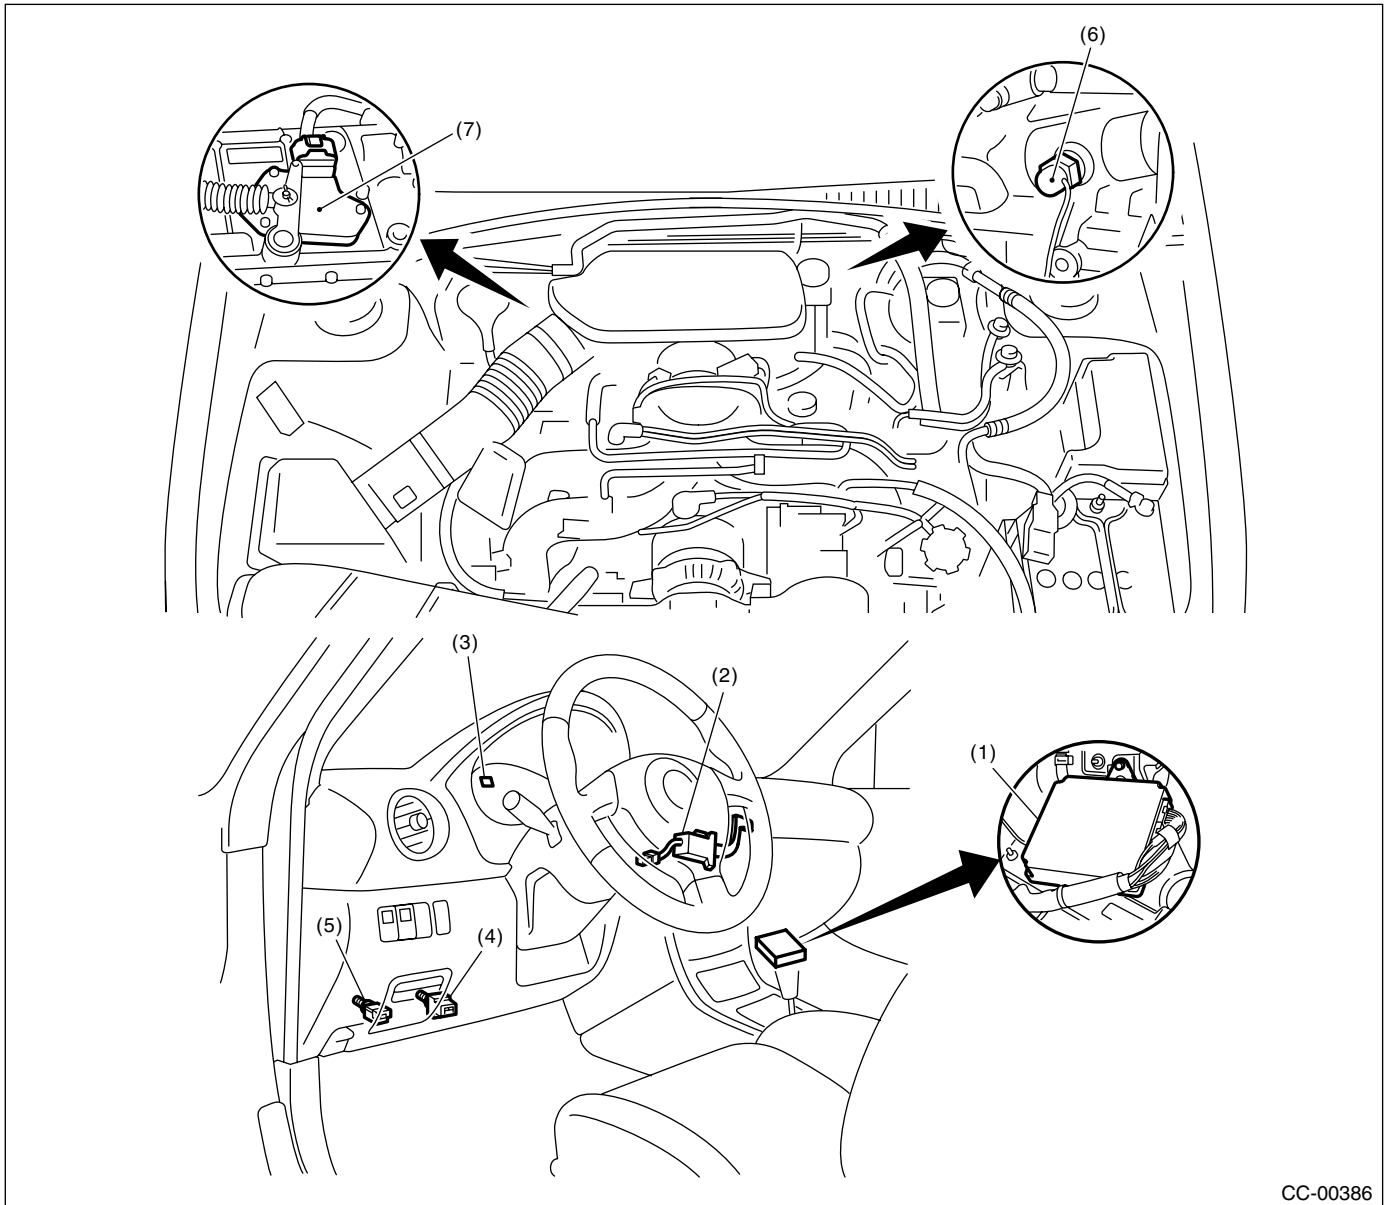

CC-00386

- | | | |
|---|---|---------------------------------|
| (1) Engine control module (ECM) | (3) Cruise indicator light & cruise set indicator light | (5) Clutch switch (MT model) |
| (2) Cruise control command switch (with built-in main switch) | (4) Stop light & brake switch | (6) Neutral position switch |
| | | (7) Inhibitor switch (AT model) |


2. TURBO MODEL

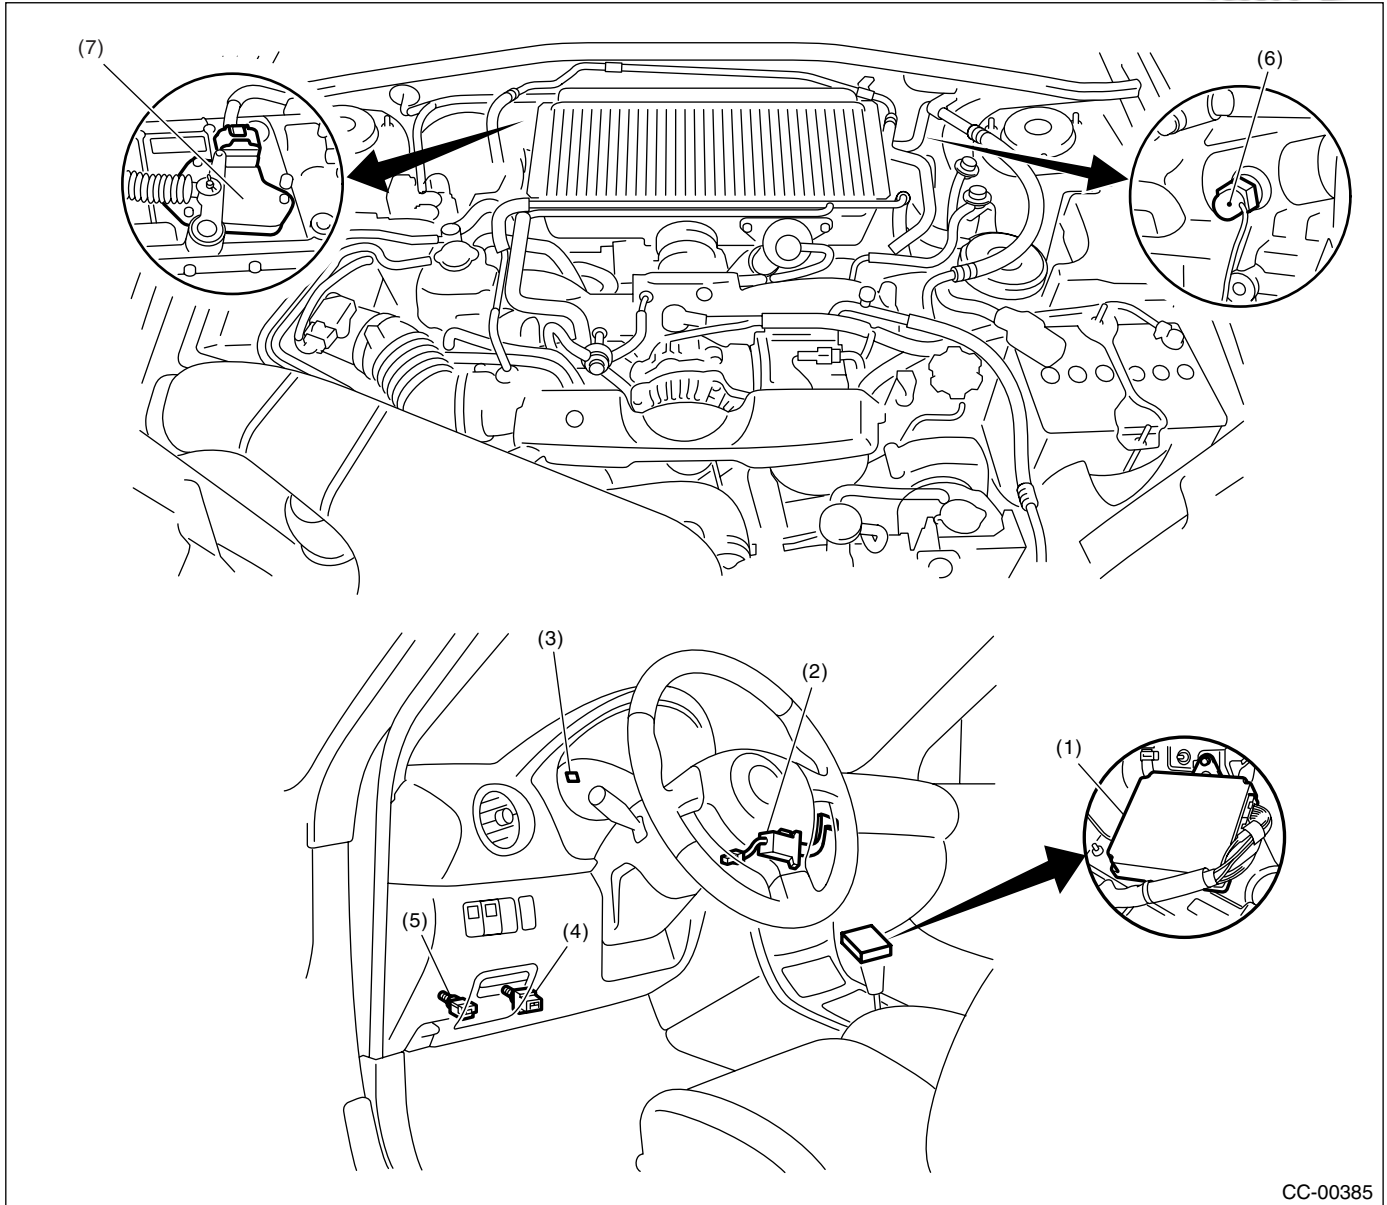

CC-00385

- | | | |
|---|--|---------------------------------|
| (1) Engine control module (ECM) | (4) Stop light and brake switch | (7) Inhibitor switch (AT model) |
| (2) Cruise control command switch (main switch built-in) | (5) Clutch switch (MT model) | |
| (3) Cruise indicator light and cruise set indicator light | (6) Neutral position switch (MT model) | |

3. STI MODEL

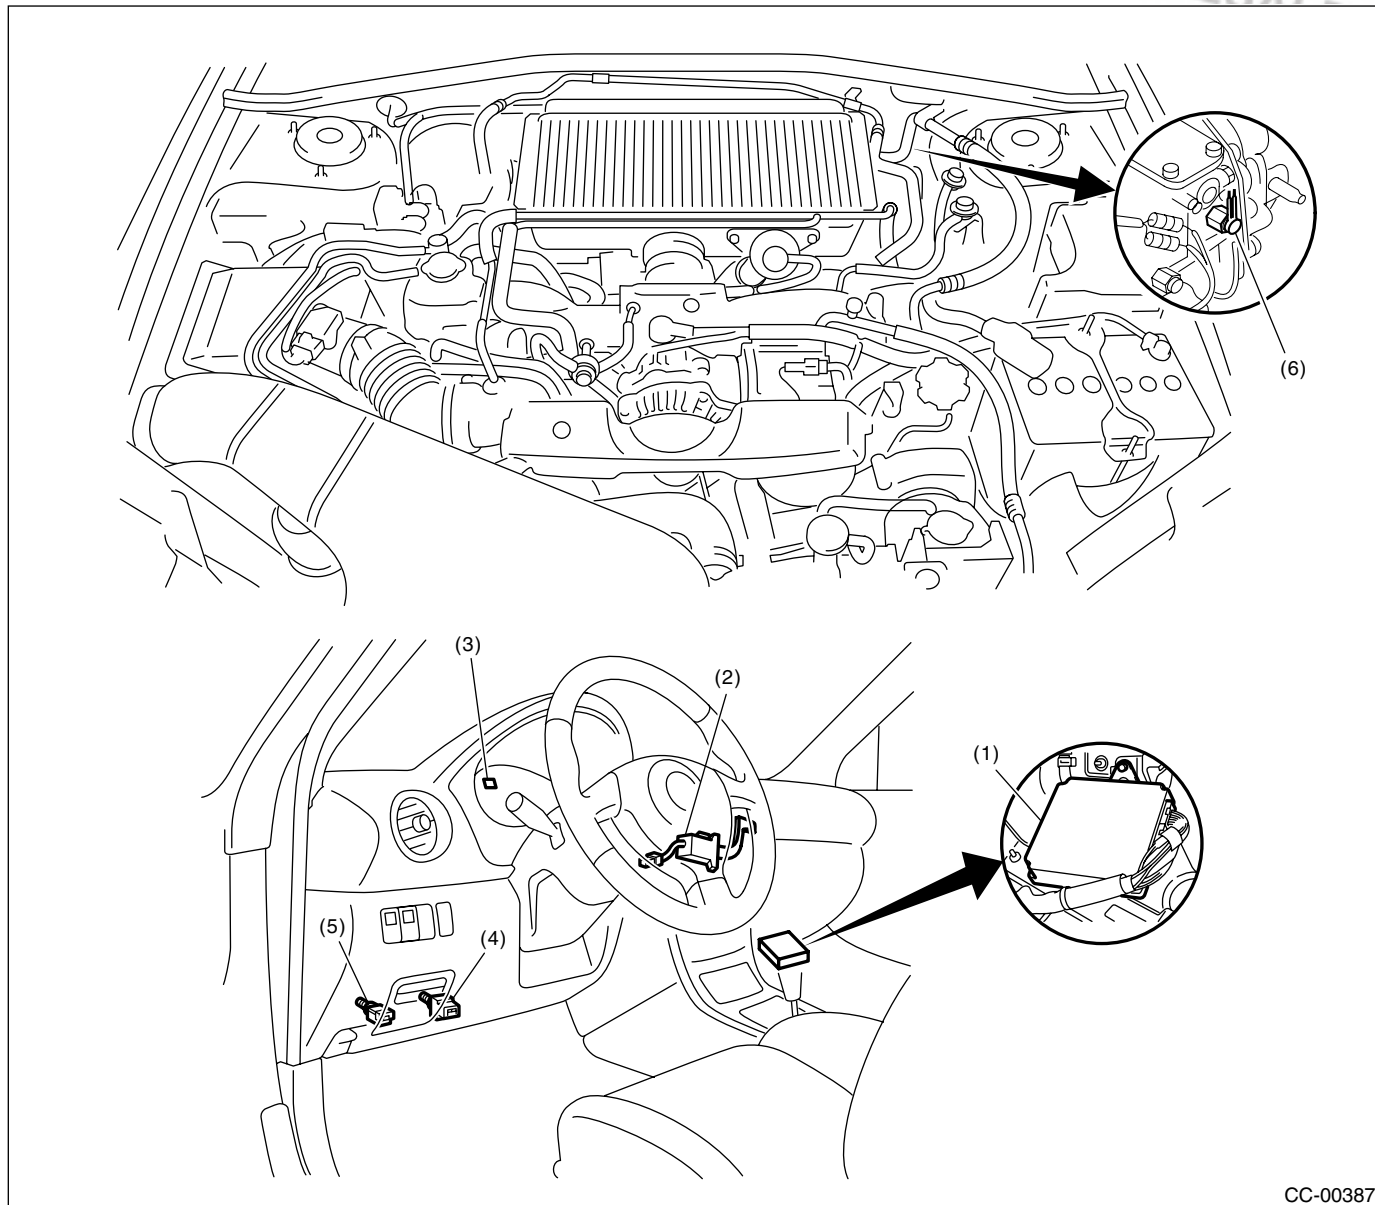

- | | | |
|---|---|------------------------------|
| (1) Engine control module (ECM) | (3) Cruise indicator light & cruise set indicator light | (5) Clutch switch (MT model) |
| (2) Cruise control command switch (with built-in main switch) | (4) Stop light & brake switch | (6) Neutral position switch |

B: CAUTION

- Before disassembling or reassembling parts, always disconnect the battery ground cable. When repairing the radio, control module and other parts with memory functions, make note of the memory before disconnecting the battery ground cable. All memory will be erased.
- Reassemble parts in the reverse order of disassembly unless otherwise indicated.
- Adjust parts to specifications specified in this manual.
- Connect the connectors and hoses securely during reassembly.
- After reassembly, ensure functional parts operate properly.

C: PREPARATION TOOL

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resistance and voltage.

2. Cruise Control Unit

A: REMOVAL

The control of cruise control system is performed by Engine control module (ECM).

1. NON-TURBO MODEL

<Ref. to FU(H4SO)-38, REMOVAL, Engine Control Module (ECM).>

2. TURBO MODEL

<Ref. to FU(H4DOTC)-45, REMOVAL, Engine Control Module (ECM).>

3. STI MODEL

<Ref. to FU(STI)-39, REMOVAL, Engine Control Module (ECM).>

B: INSTALLATION

1. NON-TURBO MODEL

<Ref. to FU(H4SO)-38, INSTALLATION, Engine Control Module (ECM).>

2. TURBO MODEL

<Ref. to FU(H4DOTC)-45, INSTALLATION, Engine Control Module (ECM).>

3. STI MODEL

<Ref. to FU(STI)-39, INSTALLATION, Engine Control Module (ECM).>


3. Cruise Control Command Switch

A: REMOVAL

WARNING:


Before servicing, be sure to read the notes in the AB section for proper handling of the driver's airbag module. <Ref. to AB-3, CAUTION, General Description.>

- 1) Set the front wheels in straight ahead position.
- 2) Turn the ignition switch to OFF.
- 3) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 4) Using the TORX® BIT T30 (Tamper resistant type), loosen the two TORX® bolts which secure driver's airbag module.

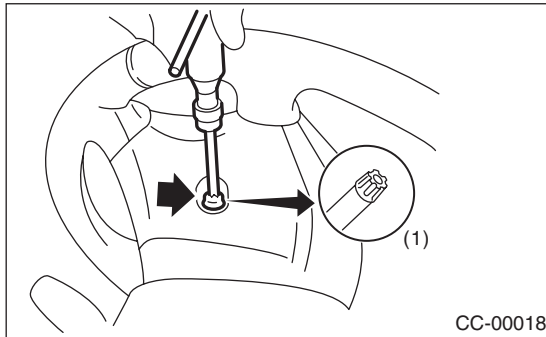


(1) TORX® BIT T30

- 5) Disconnect the airbag module connector on back of airbag module.
- 6) Remove the steering wheel. <Ref. to PS-20, REMOVAL, Steering Wheel.>
- 7) Remove four screws, and then remove the lower cover from steering wheel.

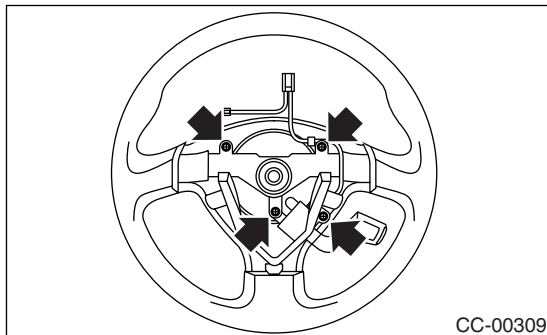

- 8) Remove the screw, and then remove the cruise control command switch from lower cover.

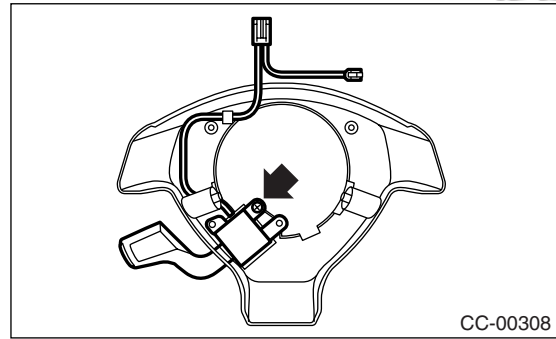


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the cruise control command switch resistance.

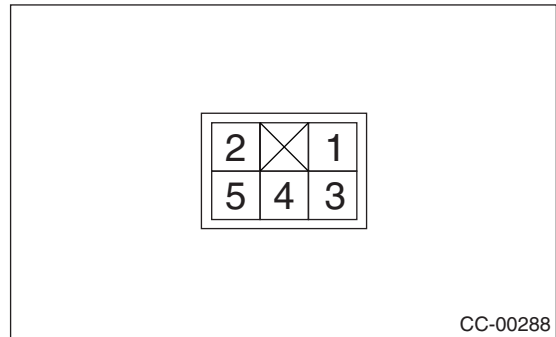

Switch	Position	Terminal No.	Standard value
CANCEL	ON	1 (+) and 2 (-)	Less than 1 Ω
	ON	1 (+) and 3 (-)	Less than 1 Ω
SET/COAST	OFF	1 and 2	More than 1 M Ω
	ON	1 and 2	Less than 1 Ω
RESUME/ACCEL	OFF	1 and 3	More than 1 M Ω
	ON	1 and 3	Less than 1 Ω
MAIN SWITCH	OFF	5 and 4	More than 1 M Ω
	ON	5 and 4	Less than 1 M Ω

If NG, replace the cruise control command switch.

4. Stop Light and Brake Switch

A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Disconnect the connector from stop and brake switch, and then remove the switch. <Ref. to BR-55, REMOVAL, Stop Light Switch.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the brake switch (A) and stop light switch (B) resistance.

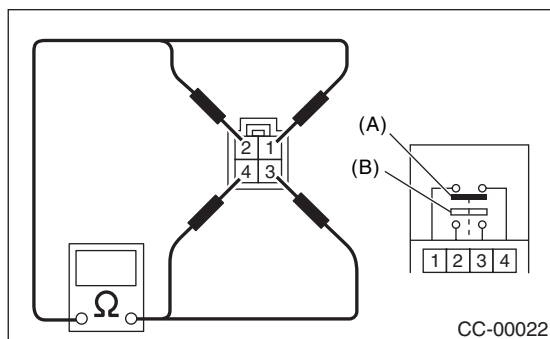

Switch	Pedal	Terminal No.	Standard
Brake	Released	1 and 4	Less than 1 Ω
	Depressed	1 and 4	More than 1 M Ω
Stop light	Released	2 and 3	More than 1 M Ω
	Depressed	2 and 3	Less than 1 Ω

If NG, replace the stop light and brake switch.

5. Clutch Switch

A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Disconnect the connector from clutch switch, and then remove the switch. <Ref. to CL-32, REMOVAL, Clutch Pedal.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the clutch switch resistance.

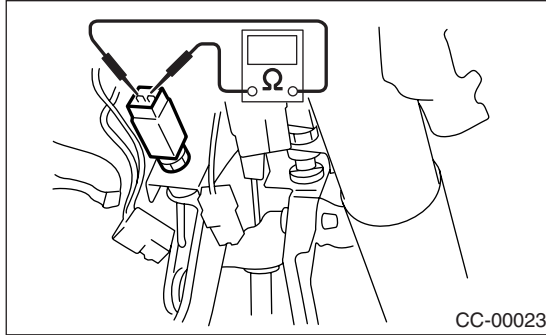

Switch	Pedal	Terminal No.	Standard
Clutch	Released	1 and 2	Less than 1 Ω
	Depressed	1 and 2	More than 1 M Ω

If NG, replace the clutch switch.

6. Inhibitor Switch

A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Disconnect the connector from inhibitor switch, and then remove the switch. <Ref. to 4AT-48, REMOVAL, Inhibitor Switch.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the inhibitor switch resistance.

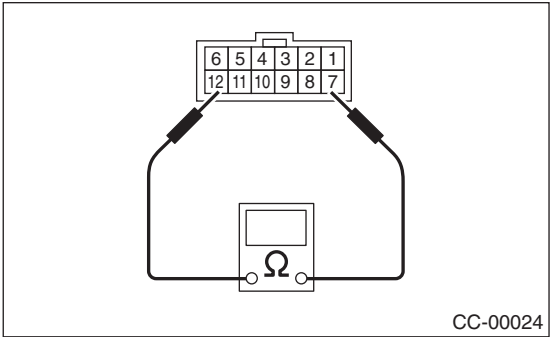

Select lever position	Terminal No.	Standard
P	7 and 12	Less than 1 Ω
N		Less than 1 Ω
Except P and N		More than 1 MΩ

If NG, replace the inhibitor switch.

7. Neutral Position Switch

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Disconnect the connector from neutral position switch, and then remove the switch.

5MT model:

<Ref. to 5MT-36, BACK-UP LIGHT AND NEUTRAL POSITION SWITCH, REMOVAL, Switches and Harness.>

6MT model:

<Ref. to 6MT-46, REMOVAL, Neutral Position Switch.>


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION


Measure the neutral position switch resistance.

- Non-turbo model

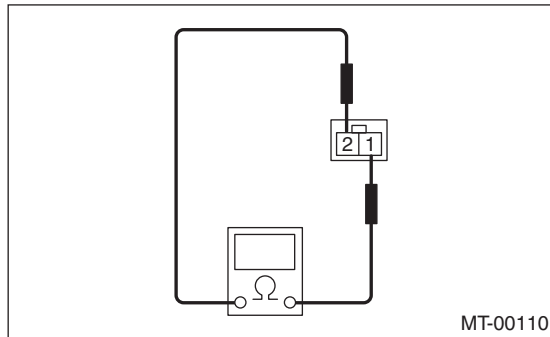


Gear shift position	Terminal No.	Specified resistance
Neutral position	1 and 2	Less than 1 Ω
Other positions		More than 1 M Ω

- Turbo model

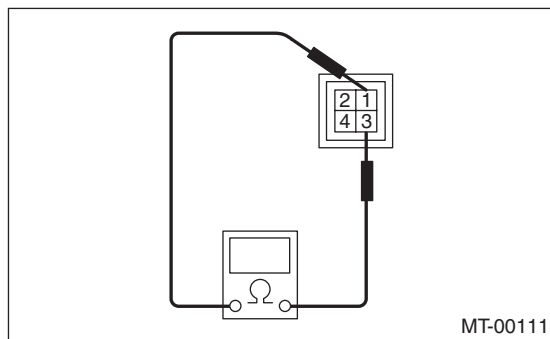

Gear shift position	Terminal No.	Specified resistance
Neutral position	1 and 3	Less than 1 Ω
Other positions		More than 1 M Ω

- STI model

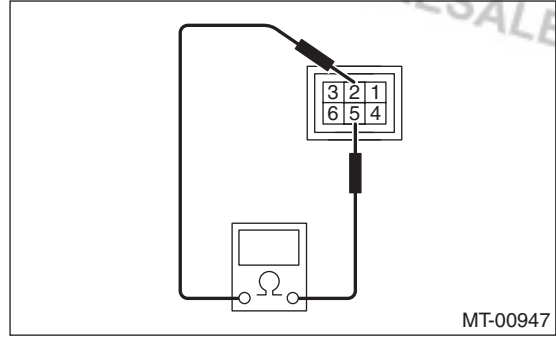

Gear shift position	Terminal No.	Specified resistance
Neutral position	2 and 5	Less than 1 Ω
Other positions		More than 1 M Ω

If NG, replace the neutral position switch.

Brought to you by Eris Studios
NOT FOR RESALE