


3. Muffler

A: REMOVAL AND INSTALLATION

1) Separate muffler from rear exhaust pipe.

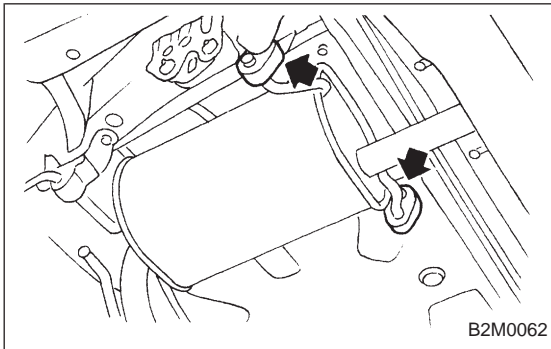

2) Remove left and right rubber cushions.


CAUTION:

Be careful not to pull down muffler.

NOTE:

To facilitate removal, apply a coat of SUBARU CRC or equivalent to mating area of rubber cushions in advance.

SUBARU CRC (Part No. 004301003)

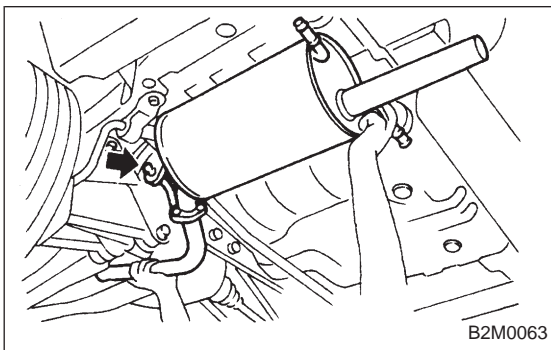


3) Remove front rubber cushion, and detach muffler assembly.

NOTE:

To facilitate removal, apply a coat of SUBARU CRC or equivalent to mating area of rubber cushion in advance.

SUBARU CRC (Part No. 004301003)

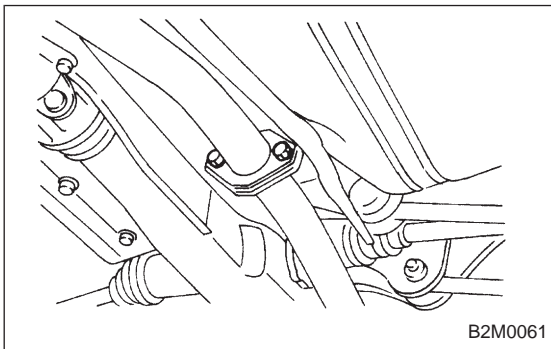

4) Installation is in the reverse order of removal.

CAUTION:

Replace gasket with a new one.

Tightening torque:

48±5 N·m (4.9±0.5 kg-m, 35.4±3.6 ft-lb)