


2. Rear Exhaust Pipe

A: REMOVAL


1) Separate rear exhaust pipe from center exhaust pipe.

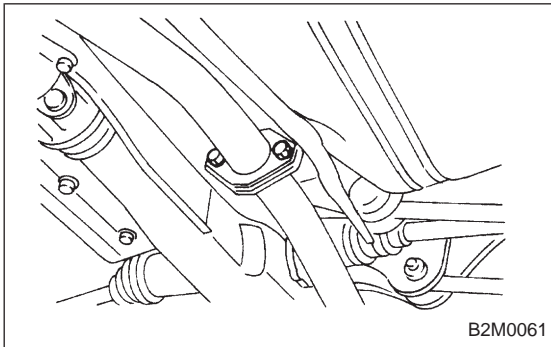

2) Separate rear exhaust pipe from muffler.

CAUTION:

Be careful not to pull down rear exhaust pipe.

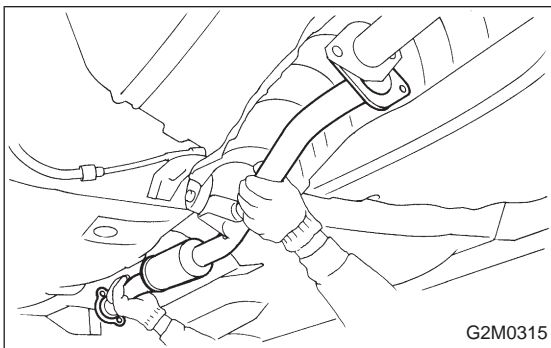


3) Remove rear exhaust pipe bracket from rubber cushion.

NOTE:

To facilitate removal, apply a coat of SUBARU CRC or equivalent to pipe bracket in advance.

SUBARU CRC (Part No. 004301003)

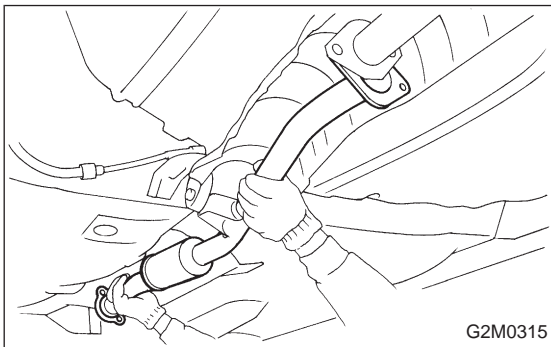

B: INSTALLATION

CAUTION:


Replace gaskets with new ones.

1) Install rear exhaust pipe bracket to rubber cushion.

NOTE:

To facilitate installation, apply a coat of SUBARU CRC or equivalent to mating area of rubber cushion in advance.


SUBARU CRC (Part No. 004301003)

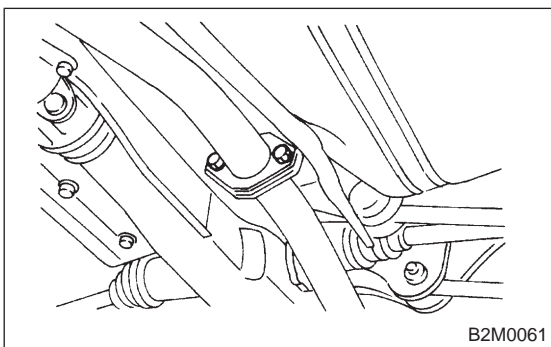

2) Install rear exhaust pipe to muffler.

Tightening torque:

48±5 N·m (4.9±0.5 kg·m, 35.4±3.6 ft·lb)

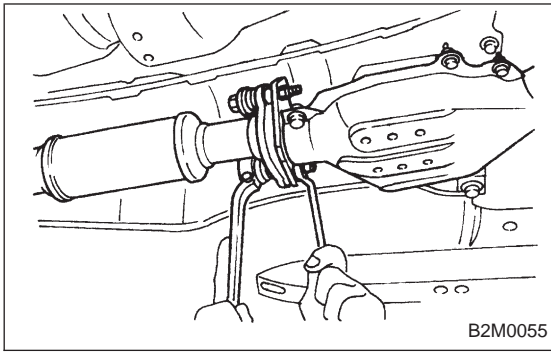

3) Install rear exhaust pipe to center exhaust pipe.

Tightening torque:

18 ± 5 N·m (1.8 ± 0.5 kg·m, 13.0 ± 3.6 ft·lb)