


### 3. Muffler

#### A: REMOVAL AND INSTALLATION

1) Separate muffler from rear exhaust pipe.

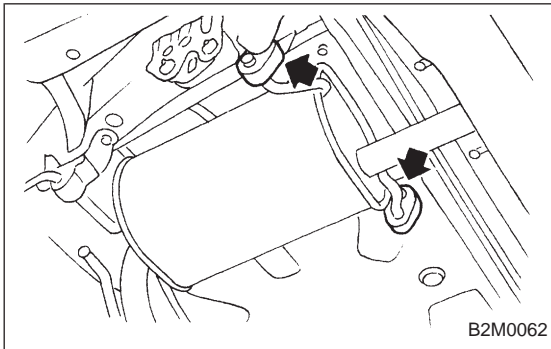

2) Remove left and right rubber cushions.


**CAUTION:**

**Be careful not to pull down muffler.**

**NOTE:**

To facilitate removal, apply a coat of SUBARU CRC or equivalent to mating area of rubber cushions in advance.

***SUBARU CRC (Part No. 004301003)***

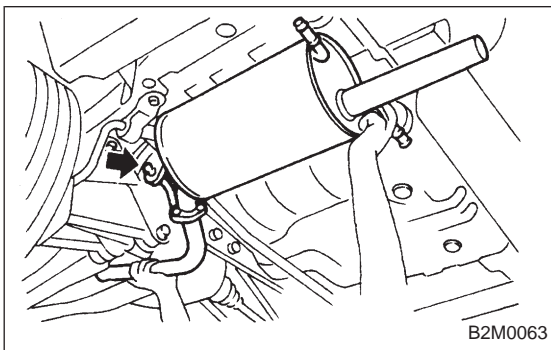


3) Remove front rubber cushion, and detach muffler assembly.

**NOTE:**

To facilitate removal, apply a coat of SUBARU CRC or equivalent to mating area of rubber cushion in advance.

***SUBARU CRC (Part No. 004301003)***

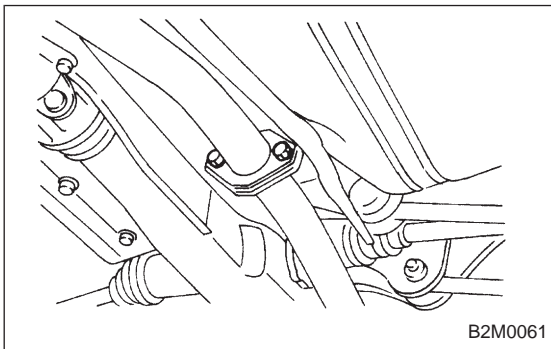

4) Installation is in the reverse order of removal.

**CAUTION:**

**Replace gasket with a new one.**

**Tightening torque:**

***48±5 N·m (4.9±0.5 kg-m, 35.4±3.6 ft-lb)***