


1. Intake Manifold

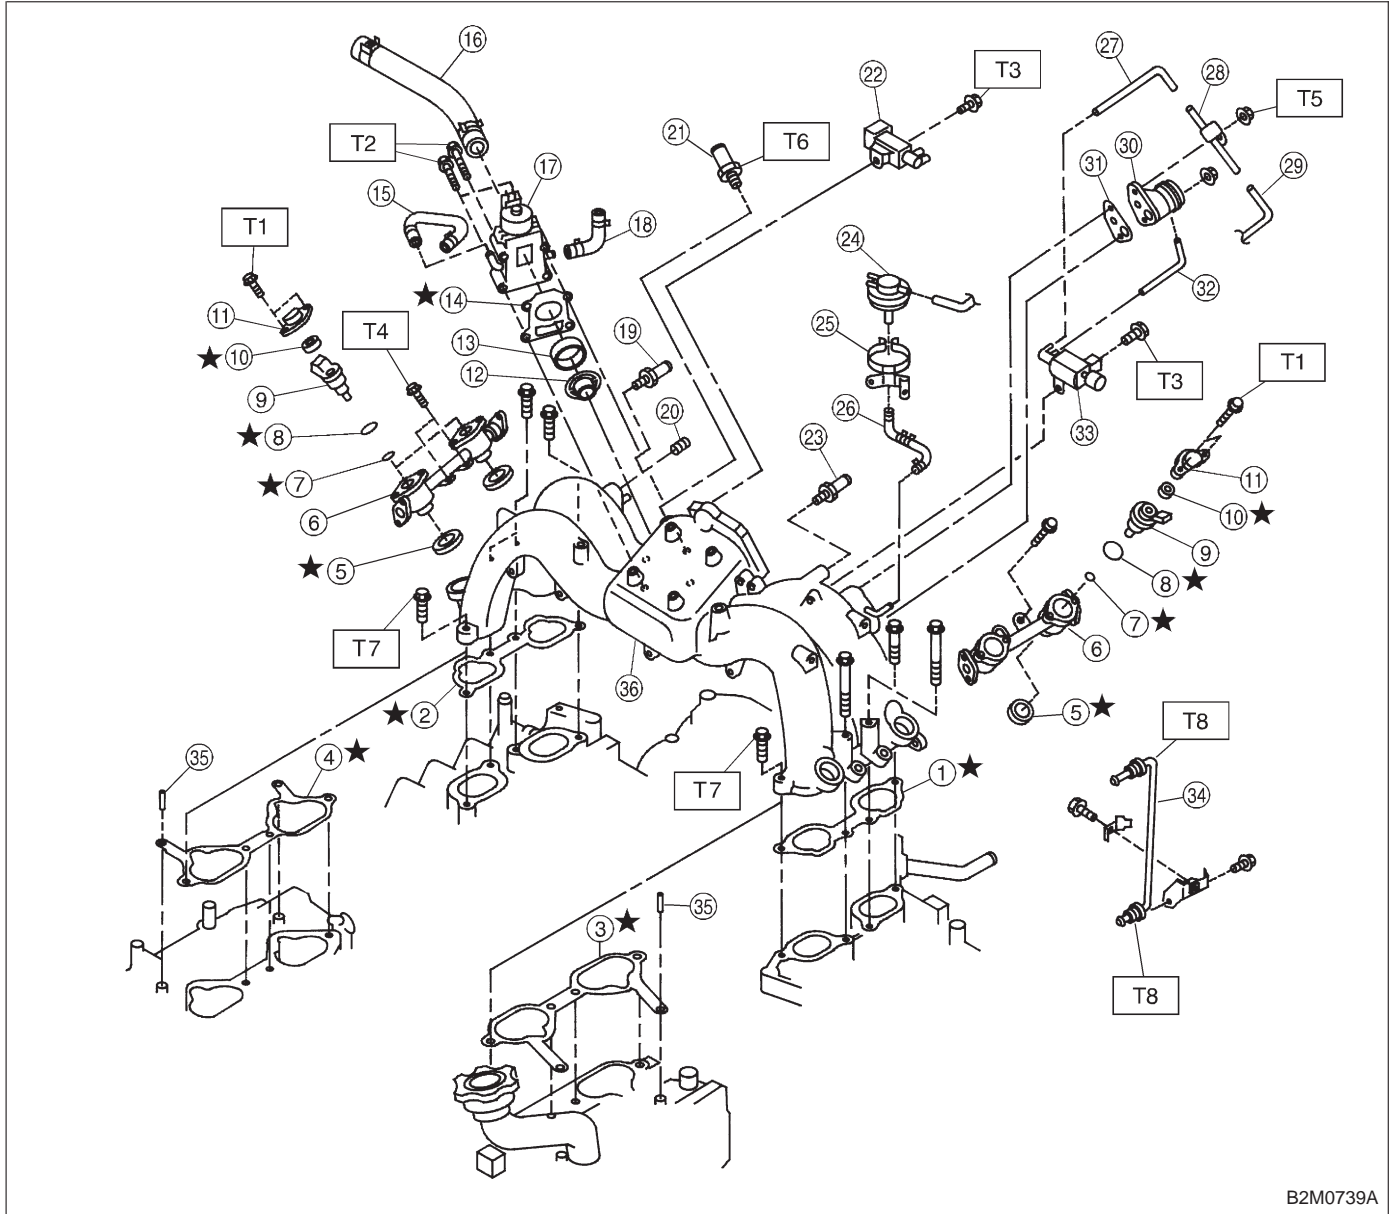

B2M0739A

- ① Intake manifold gasket LH (2200 cc model)
- ② Intake manifold gasket RH (2200 cc model)
- ③ Intake manifold gasket LH (2500 cc model)
- ④ Intake manifold gasket RH (2500 cc model)
- ⑤ Fuel injector pipe insulator
- ⑥ Fuel injector pipe
- ⑦ O-ring A
- ⑧ O-ring B
- ⑨ Fuel injector
- ⑩ Insulator
- ⑪ Fuel injector cap
- ⑫ Plate
- ⑬ Sealing
- ⑭ Gasket
- ⑮ Engine coolant hose B
- ⑯ Air by-pass hose
- ⑰ Idle air control solenoid valve
- ⑱ Engine coolant hose A
- ⑲ Nipple (AT model)
- ⑳ Plug
- ㉑ PCV valve
- ㉒ Purge control solenoid valve
- ㉓ Nipple
- ㉔ BPT
- ㉕ BPT holder bracket
- ㉖ Back pressure hose
- ㉗ EGR vacuum hose A
- ㉘ EGR vacuum pipe
- ㉙ EGR vacuum hose C
- ㉚ EGR valve

- ⑳ Gasket
- ㉑ EGR vacuum hose B
- ㉒ EGR solenoid valve
- ㉓ EGR pipe
- ㉔ Collar
- ㉕ Intake manifold

Tightening torque: N·m (kg·m, ft·lb)

- T1: 3.4±0.5 (0.35±0.05, 2.5±0.4)**
- T2: 6.4±0.5 (0.65±0.05, 4.7±0.4)**
- T3: 16±1.5 (1.6±0.15, 11.6±1.1)**
- T4: 19±1 (1.9±0.1, 13.7±0.7)**
- T5: 19±1.5 (1.9±0.15, 13.7±1.1)**
- T6: 23±3 (2.3±0.3, 16.6±2.2)**
- T7: 25±2 (2.5±0.2, 18.1±1.4)**
- T8: 34±2 (3.5±0.2, 25.3±1.4)**