

1. Supplemental Restraint System "Airbag"

Airbag system wiring harness is routed near the instrument panel, heater unit, blower motor and control unit.

CAUTION:

- All Airbag system wiring harness and connectors are colored yellow. Do not use electrical test equipment on these circuit.
- Be careful not to damage Airbag system wiring harness when servicing the instrument panel, heater unit, blower motor and control unit.

2. Heater Unit

A: REMOVAL AND INSTALLATION

- 1) Disconnect GND cable from battery.
- 2) Remove heater hoses (inlet, outlet) in engine compartment.

NOTE:

Drain as much coolant from heater unit as possible, and plug disconnected hose with cloth.

<Ref. to 2-5 [W1A0].>

- 3) Remove instrument panel.


<Ref. to 5-4 [W1A0].>

- 4) Remove steering support beam.

<Ref. to 5-1 [C600].>

- 5) Remove evaporator. (With A/C model)

<Ref. to 4-7 [W14A0].>

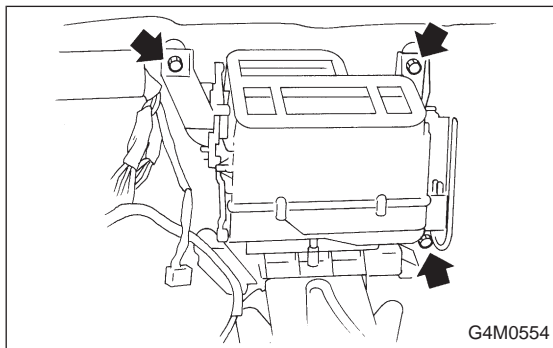

- 6) Remove heater unit.