


2. Pedal (AT Model)

1. LHD MODEL

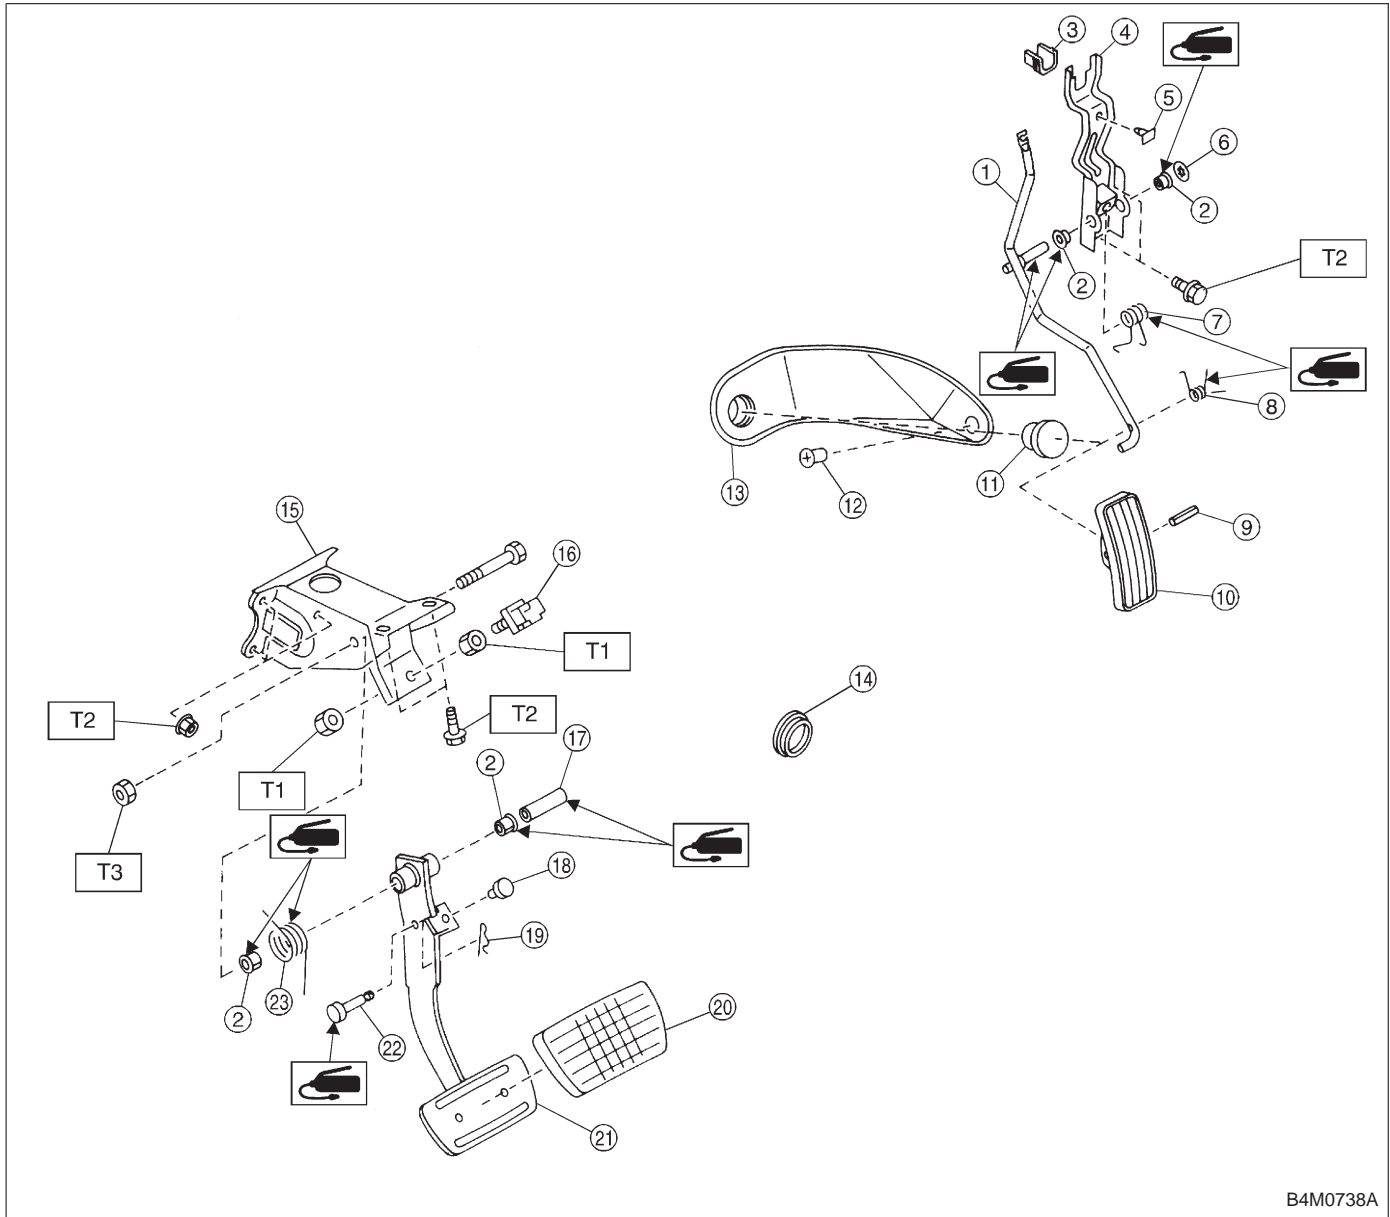

B4M0738A


- ① Accelerator pedal
- ② Bushing
- ③ Holder
- ④ Accelerator bracket
- ⑤ Stopper
- ⑥ Clip
- ⑦ Accelerator spring
- ⑧ Accelerator pedal spring
- ⑨ Spring pin
- ⑩ Accelerator pedal pad

- ⑪ Accelerator stopper
- ⑫ Clip
- ⑬ Accelerator plate
- ⑭ Plug
- ⑮ Pedal bracket
- ⑯ Stop light switch (Without T.C.S.) / stroke sensor (With T.C.S.)
- ⑰ Spacer
- ⑱ Stopper
- ⑲ Snap pin

- ⑳ Brake pedal pad
- ㉑ Brake pedal
- ㉒ Clevis pin
- ㉓ Brake pedal spring

Tightening torque: N·m (kg·m, ft·lb)
T1: 8±2 (0.8±0.2, 5.8±1.4)
T2: 18±5 (1.8±0.5, 13.0±3.6)
T3: 29±7 (3.0±0.7, 21.7±5.1)

2. RHD MODEL

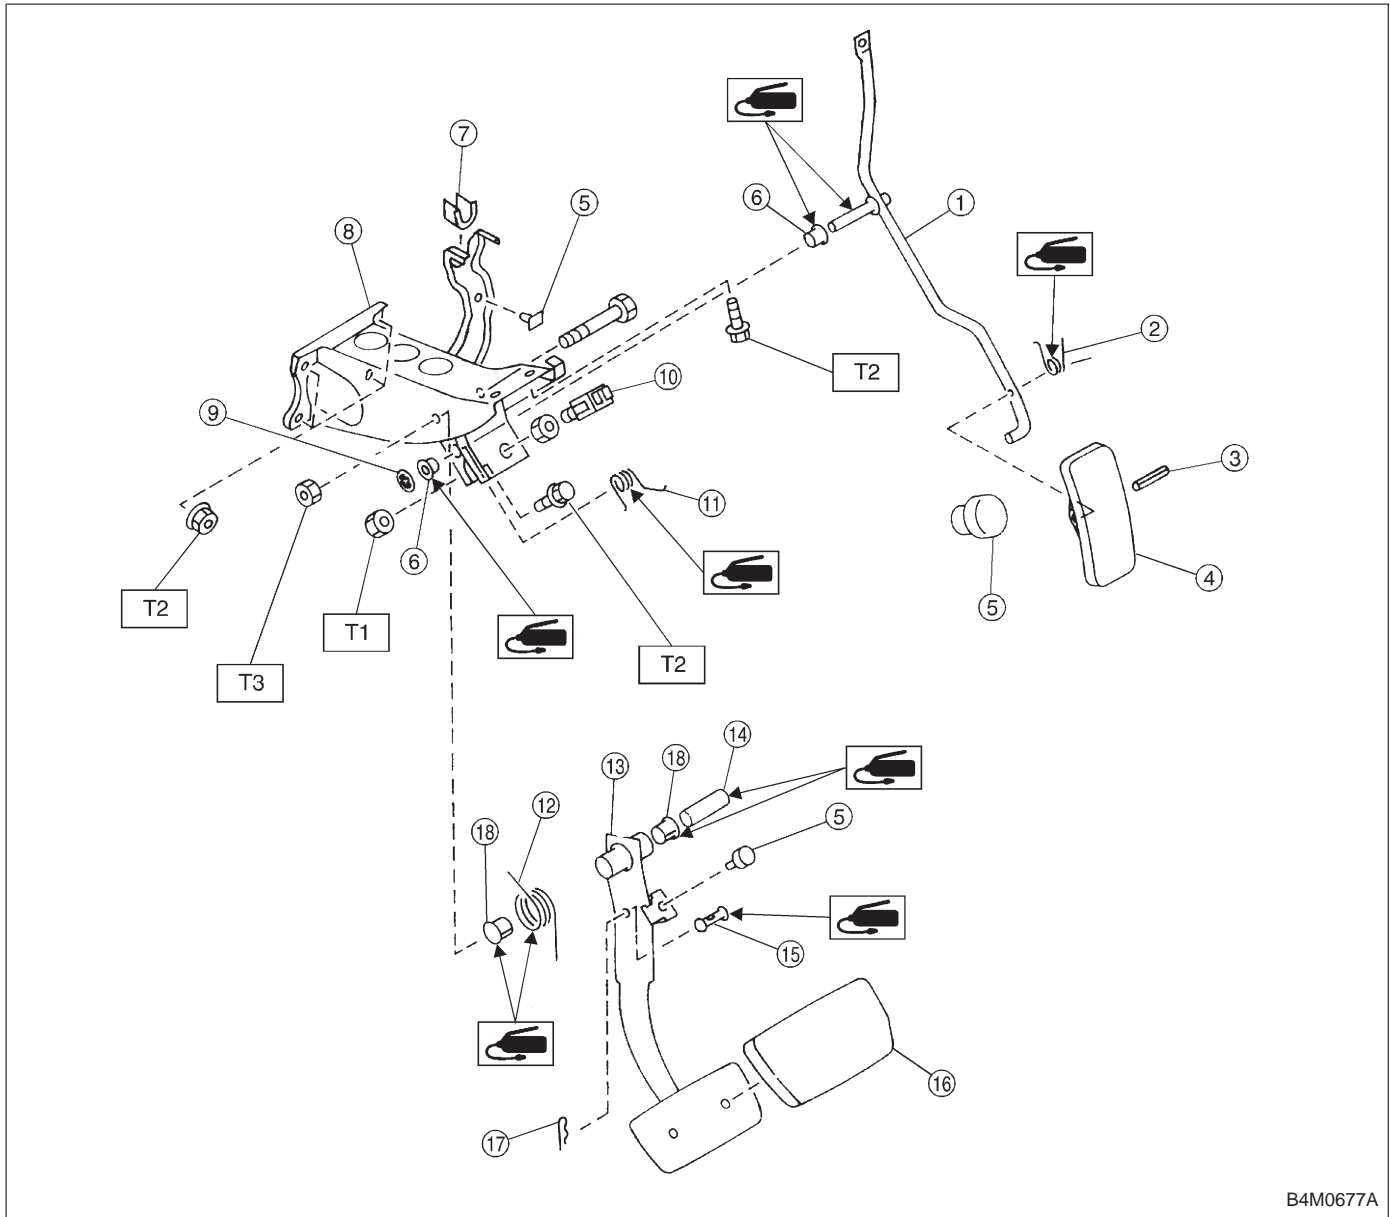

B4M0677A

- ① Accelerator pedal
- ② Accelerator pedal spring
- ③ Spring pin
- ④ Accelerator pedal pad
- ⑤ Stopper
- ⑥ Bushing
- ⑦ Holder
- ⑧ Pedal bracket

- ⑨ Clip
- ⑩ Stop light switch
- ⑪ Accelerator spring
- ⑫ Brake pedal spring
- ⑬ Brake pedal
- ⑭ Spacer
- ⑮ Clevis pin
- ⑯ Brake pedal pad

- ⑰ Snap pin
- ⑱ Bushing

Tightening torque: N·m (kg·m, ft·lb)

T1: 8±2 (0.8±0.2, 5.8±1.4)

T2: 18±5 (1.8±0.5, 13.0±3.6)

T3: 29±7 (3.0±0.7, 21.7±5.1)