

18. Brake Hose and Pipe **AIRBAG****SUPPLEMENTAL RESTRAINT SYSTEM "AIRBAG"**

Airbag system wiring harness is routed near the center brake pipe.


CAUTION:

- All Airbag system wiring harness and connectors are colored yellow. Do not use electrical test equipment on these circuit.
- Be careful not to damage Airbag system wiring harness when servicing the center brake pipe.

A: REMOVAL AND INSTALLATION**CAUTION:**

- When removing and installing the brake pipe, make sure that it is not bent.
- After installing the brake pipe and hose, bleed the air.
- After installing the brake hose, make sure that it does not touch the tire or suspension assembly, etc.

5. MODELS WITH ABS (ABS 5.3i TYPE)

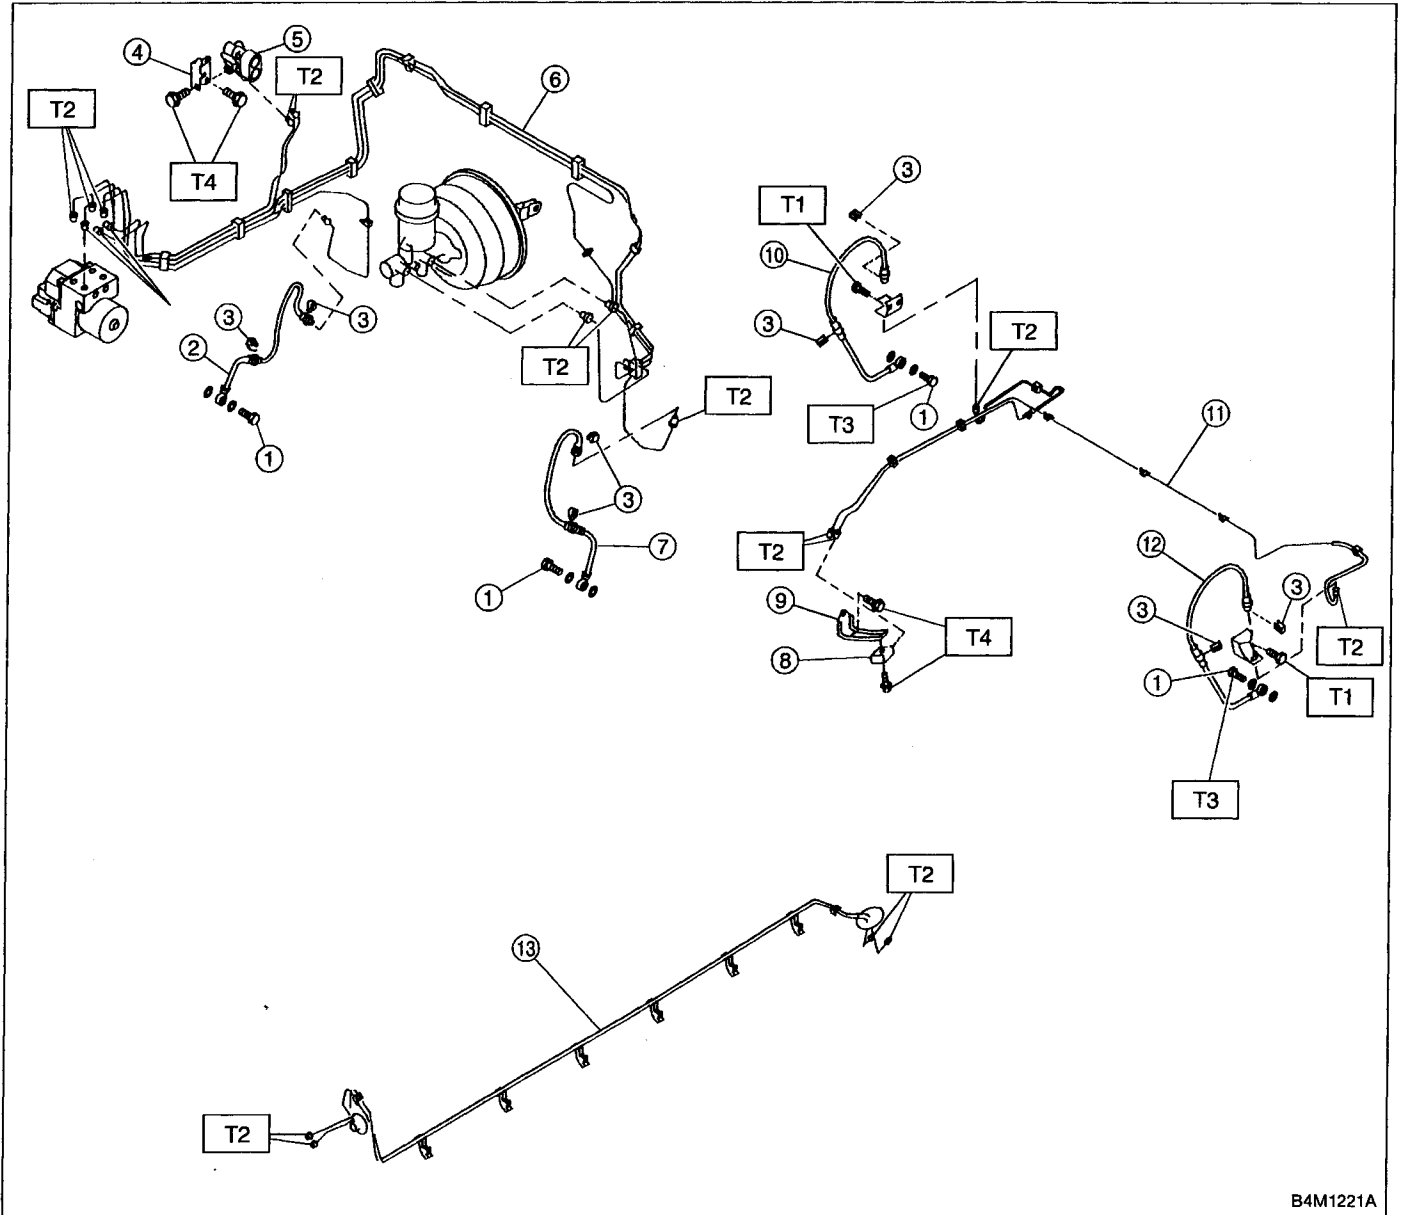

B4M1221A

- | | |
|-------------------------|--------------------------|
| ① Union bolt | ⑧ Two-way connector |
| ② Front brake hose RH | ⑨ Connector bracket |
| ③ Clip | ⑩ Rear brake hose RH |
| ④ Valve bracket | ⑪ Rear brake pipe ASSY |
| ⑤ Proportioning valve | ⑫ Rear brake hose LH |
| ⑥ Front brake pipe ASSY | ⑬ Center brake pipe ASSY |
| ⑦ Front brake hose LH | |

Tightening torque: N·m (kg·m, ft·lb)

T1: 13 ± 3 (1.3 ± 0.3 , 9.4 ± 2.2)

T2: 15^{+3}_{-2} ($1.5^{+0.3}_{-0.2}$, $10.8^{+2.2}_{-1.4}$)

T3: 18 ± 3 (1.8 ± 0.3 , 13.0 ± 2.2)

T4: 18 ± 5 (1.8 ± 0.5 , 13.0 ± 3.6)