

6. Diagnostics Procedure

A: BASIC DIAGNOSTICS PROCEDURE

6A1 : CHECK SECURITY SYSTEM FUNCTION.

- 1) Perform basic diagnostics procedure of keyless entry system. <Ref. to 6-2b [T6A0].>
- 2) Perform pre-inspection. <Ref. to 6-2c [T200].>
- 3) Open all windows.
- 4) Remove ignition key from ignition switch.
- 5) Set the room light switch in the middle position.
- 6) Close all doors, rear gate and trunk lid.
- 7) Press the LOCK/ARM button one time.

CHECK : *Does the clearance light blink one time?*

YES : Go to step 6A2.

NO : Go to step 6B1.

6A2 : CHECK SECURITY SYSTEM FUNCTION.

Check if the security indicator light blinks.

CHECK : *Does the security indicator light blink every 2 seconds?*

YES : Go to step 6A3.

NO : Go to step 6C1.

6A3 : CHECK SECURITY SYSTEM FUNCTION.

Press the UNLOCK/DISARM button one time.

CHECK : *Does the clearance light blink two times?*

YES : Go to step 6A4.

NO : Replace security control module. <Ref. to 6-2 [W14A1].>

6A4 : CHECK SECURITY SYSTEM FUNCTION.

Check if the room light activates.

CHECK : *Does the room light turn on for 30 seconds, and then turn off?*

YES : Go to step 6A5.

NO : Replace security control module. <Ref. to 6-2 [W14A1].>

6A5 : CHECK SECURITY SYSTEM FUNCTION.

1) Unlock all doors with door locking switch in the front door.

2) Open the front left door.

CHECK : *Does the security indicator light blink every 1/8 seconds?*

YES : Go to step 6A6.

NO : Go to step 6D1.

6A6 : CHECK SECURITY SYSTEM FUNCTION.

Check if the clearance light activates.

CHECK : *Does the clearance light blinking remain?*

YES : Go to step 6A7.

NO : Replace security control module. <Ref. to 6-2 [W14A1].>

6A7 : CHECK SECURITY SYSTEM FUNCTION.

Check if the horn activates.

CHECK : *Does the horn sound remain?*

YES : Go to step 6A8.

NO : Go to step 6M1.

6A8 : CHECK SECURITY SYSTEM FUNCTION.

Turn on starter.

CHECK : *Does the starter motor activate?*

YES : Go to step 6E1.

NO : Go to step 6A9.

6A9 : CHECK SECURITY SYSTEM FUNCTION.

Close the front left door.

CHECK : *Does the horn sound and clearance light blinking deactivate, and starter motor activate after approximately 30 seconds?*

YES : Go to step 6A10.

NO : Replace security control module. <Ref. to 6-2 [W14A1].>

6A10 : CHECK SECURITY SYSTEM FUNCTION.

Check if the security indicator light activates.

CHECK : *Does the security indicator light blink every 2 seconds?*

YES : Go to step 6A11.

NO : Replace security control module. <Ref. to 6-2 [W14A1].>

6A11 : CHECK SECURITY SYSTEM FUNCTION.

Open the front right door.

CHECK : *Does the security indicator light blink every 1/8 seconds, the horn sound, the clearance light blink, and the starter motor deactivate?*

YES : Go to step 6A12.

NO : Go to step 6F1.

6A12 : CHECK SECURITY SYSTEM FUNCTION.

Press the UNLOCK/DISARM button.

CHECK : *Does the security indicator light blink, the horn and clearance light deactivate, and the starter motor activate?*

YES : Go to step 6A13.

NO : Replace security control module. <Ref. to 6-2 [W14A1].>

6A13 : CHECK SECURITY SYSTEM FUNCTION.

- 1) Close the front right door.
- 2) Press the LOCK/ARM button.
- 3) Open the rear left door.

CHECK : *Does the security indicator light blink every 1/8 seconds, the horn sound, the clearance light blink, and the starter motor deactivate?*

YES : Go to step 6A14.

NO : Go to step 6G1.

6A14 : CHECK SECURITY SYSTEM FUNCTION.

- 1) Close the rear left door.
- 2) Open the rear right door.

CHECK : *Does the security indicator light blink every 1/8 seconds, the horn sound, the clearance light blink, and the starter motor deactivate?*

YES : Go to step 6A15.

NO : Go to step 6H1.

6A15 : CHECK SECURITY SYSTEM FUNCTION.

Close the rear right door.

CHECK : *Is the vehicle type wagon?*

YES : Go to step 6A16.

NO : Go to step 6A17.

6A16 : CHECK SECURITY SYSTEM FUNCTION.

Open the rear gate.

CHECK : *Does the security indicator light blink every 1/8 seconds, the horn sound, the clearance light blink, and the starter motor deactivate?*

YES : Go to step 6A18.

NO : Go to step 6I1.

6A17 : CHECK SECURITY SYSTEM FUNCTION.

Open the trunk lid.


CHECK : *Does the security indicator light blink every 1/8 seconds, the horn sound, the clearance light blink, and the starter motor deactivate?*

YES : Go to step 6A18.

NO : Go to step 6J1.

6A18 : PERFORM IMPACT SENSITIVITY TEST.

- 1) Close the rear gate or trunk lid.
- 2) Close all windows.
- 3) Cover the hood with a blanket.
- 4) Perform arming.
- 5) Perform impact sensitivity test.

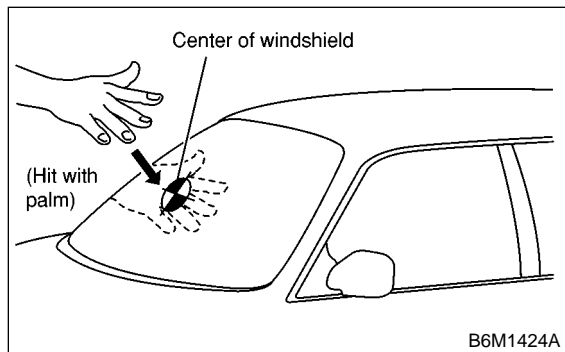

- CHECK** : **Does the horn chirp?**
- YES** : Go to step **6A19**.
- NO** : Go to step **6K1**.

6A19 : CHECK PASSIVE ARM.

- 1) Remove the driver's side sill cover. <Ref. to 6-2 [W5A0].>
- 2) Connect the white connector (1-pin) at front pillar lower.
- 3) Close all doors, rear gate or trunk lid.

- CHECK** : **Does the arming automatically function after 1 minute?**
- YES** : Go to step **6A20**.
- NO** : Go to step **6L1**.

6A20 : CHECK BATTERY DISCONNECT PROTECTION.

- 1) Press the UNLOCK/DISARM button.
- 2) Connect the white connector (1-pin) at front pillar lower.
- 3) Install the driver's side sill cover. <Ref. to 6-2 [W5A0].>
- 4) Open the front hood.
- 5) Press the LOCK/ARM button.
- 6) Disconnect the ground cable from battery.
- 7) Connect the ground cable to battery.

- CHECK** : **Does re-arming function automatically?**
- YES** : End of basic diagnostics procedure. Press the UNLOCK/DISARM button, and then close all doors, rear gate or trunk lid. Perform ignition switch position turned LOCK to ON to LOCK.
- NO** : Replace security control module. <Ref. to 6-2 [W14A1].>

B: DIAGNOSTICS ITEM 1

6B1 : CHECK FUSE.

Remove and visually check fuse No. 7 (in main fuse box).

- CHECK** : *Is fuse No. 7 blown?*
- YES** : Replace fuse (20 A).
- NO** : Go to step **6B2**.

6B2 : CHECK FUSE.

Remove and visually check fuse No. 5 (in main fuse box).

- CHECK** : *Is fuse No. 5 blown?*
- YES** : Replace fuse (10 A).
- NO** : Go to step **6B3**.

6B3 : CHECK CLEARANCE LIGHT BULB.


Remove and visually check each clearance light bulb.

- CHECK** : *Is the bulb blown?*
- YES** : Replace clearance light bulb.
- NO** : Go to step **6B4**.

6B4 : CHECK POWER SUPPLY FOR CLEARANCE LIGHT.

Measure voltage between main fuse box connector (F68) and chassis ground.

Connector & terminal
(F68) No. 4 (+) — Chassis ground (-):

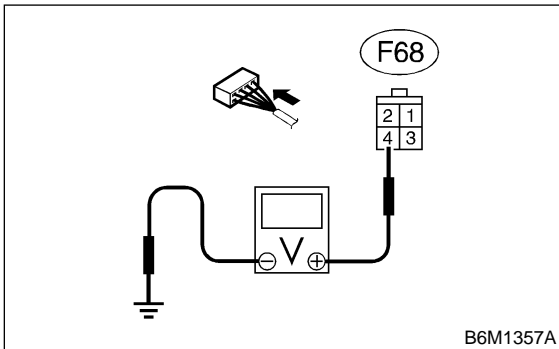


- CHECK** : *Is the voltage more than 10 V?*
- YES** : Go to step **6B5**.
- NO** : Repair wiring harness between main fuse box and battery.

6B5 : CHECK POWER SUPPLY FOR CLEARANCE LIGHT.

- 1) Disconnect connector from security control module.
- 2) Measure voltage between security control module connector (B93) and chassis ground.

Connector & terminal
(B93) No. 11 (+) — Chassis ground (-):

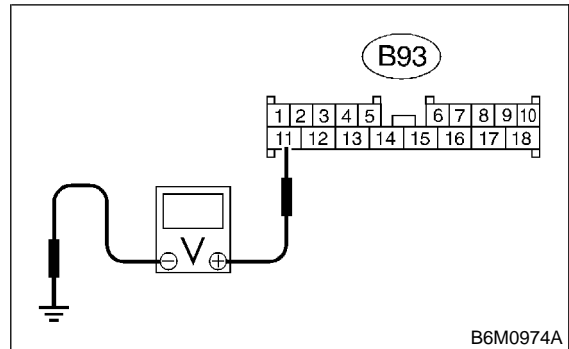


- CHECK** : *Is the voltage more than 10 V?*
- YES** : Go to step **6B6**.
- NO** : Repair wiring harness between security control module and main fuse box.

6B6 : CHECK HARNESS CONNECTOR BETWEEN SECURITY CONTROL MODULE AND FUSE BOX.

- 1) Disconnect connector (B152) from fuse box.
- 2) Measure resistance between security control module connector (B93) and fuse box connector (B152).

Connector & terminal
(B93) No. 12 — (B152) No. 10:

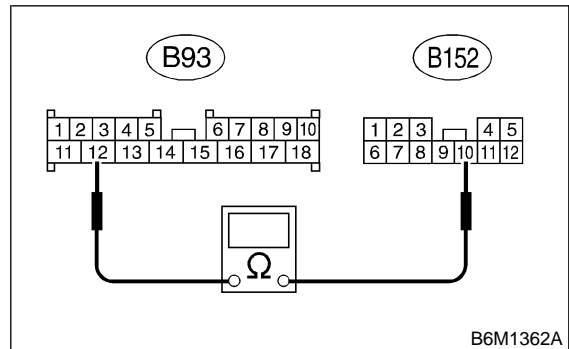


- CHECK** : *Is the resistance less than 10 Ω?*
- YES** : Go to step **6B7**.
- NO** : Repair wiring harness between security control module and fuse box.

6B7 : CHECK FUSE BOX CIRCUIT.

- 1) Connect connector (B152) to fuse box.
- 2) Measure resistance between fuse box connector (B152) and (F41).

Connector & terminal

(B152) No. 10 — (F41) No. 1:

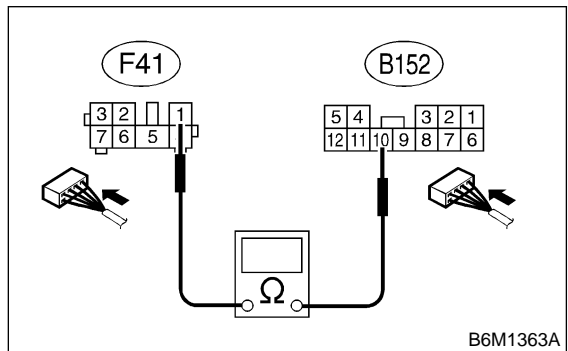


- CHECK** : *Is the resistance less than 10 Ω?*
- YES** : Go to step **6B8**.
- NO** : Repair or replace fuse box.

6B8 : CHECK FUSE BOX CIRCUIT.

Measure resistance between fuse box connector (B152).

Connector & terminal

(B152) No. 10 — No. 11:

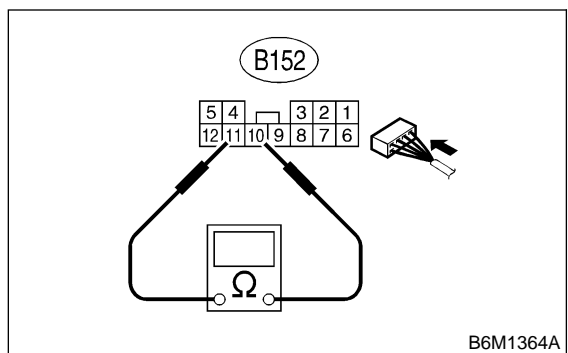


- CHECK** : *Is the resistance less than 10 Ω?*
- YES** : Go to step **6B9**.
- NO** : Repair or replace fuse box.

6B9 : CHECK HARNESS CONNECTOR BETWEEN FRONT CLEARANCE LIGHT AND FUSE BOX.

- 1) Disconnect connector from front clearance light RH and fuse box.
- 2) Measure resistance between front clearance light RH connector (F4) and fuse box connector (F41).

Connector & terminal

(F4) No. 1 — (F41) No. 1:

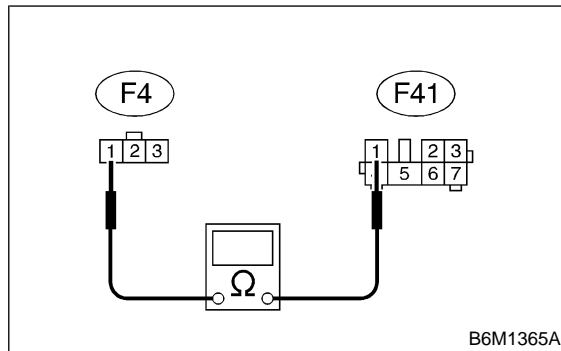


- CHECK** : *Is the resistance less than 10 Ω?*
- YES** : Go to step **6B10**.
- NO** : Repair wiring harness between front clearance light RH and fuse box.

6B10 : CHECK HARNESS CONNECTOR BETWEEN FRONT CLEARANCE LIGHT AND FUSE BOX.

- 1) Disconnect connector from front clearance light LH.
- 2) Measure resistance between front clearance light LH connector (F22) and fuse box connector (F41).

Connector & terminal
(F22) No. 1 — (F41) No. 1:

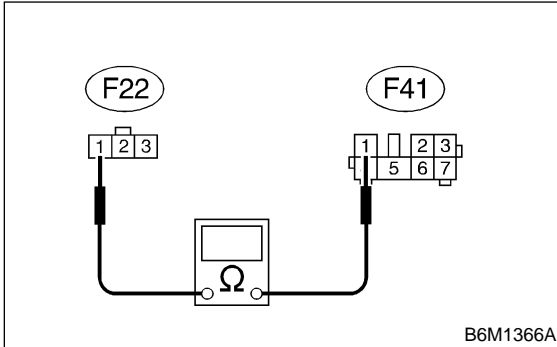


- CHECK** : *Is the resistance less than 10 Ω?*
YES : Go to step **6B11**.
NO : Repair wiring harness between front clearance light LH and fuse box.

6B11 : CHECK HARNESS CONNECTOR BETWEEN FRONT CLEARANCE LIGHT AND CHASSIS GROUND.

Measure resistance between front clearance light RH connector (F4) and chassis ground.

Connector & terminal
(F4) No. 2 (+) — Chassis ground (-):

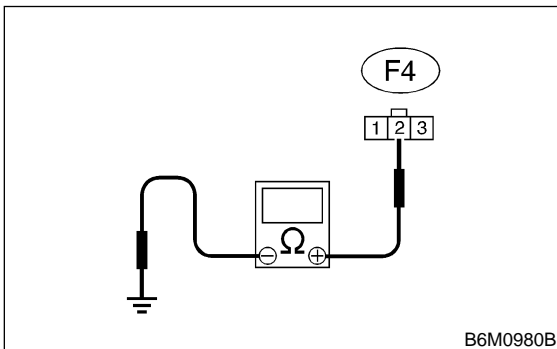


- CHECK** : *Is the resistance less than 10 Ω?*
YES : Go to step **6B12**.
NO : Repair wiring harness between front clearance light RH and chassis ground.

6B12 : CHECK HARNESS CONNECTOR BETWEEN FRONT CLEARANCE LIGHT AND CHASSIS GROUND.

Measure resistance between front clearance light LH connector (F22) and chassis ground.

Connector & terminal
(F22) No. 2 (+) — Chassis ground (-):

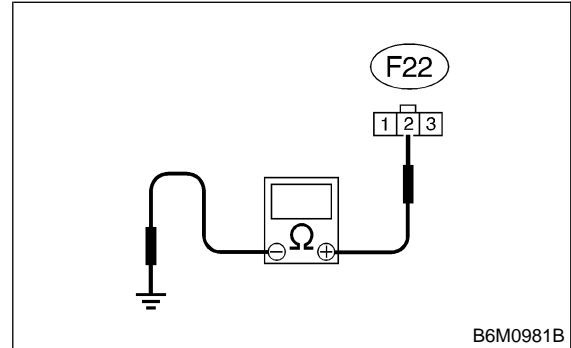


- CHECK** : *Is the resistance less than 10 Ω?*
YES : Go to step **6B13**.
NO : Repair wiring harness between front clearance light LH and chassis ground.

6B13 : CHECK HARNESS CONNECTOR BETWEEN REAR CLEARANCE LIGHT AND FUSE BOX.

- 1) Disconnect connector from rear clearance light RH and fuse box.
- 2) Measure resistance between rear clearance light RH connector (R26) and fuse box connector (B152).

Connector & terminal
(R26) No. 3 (sedan), No. 4 (wagon) — (B152) No. 10:

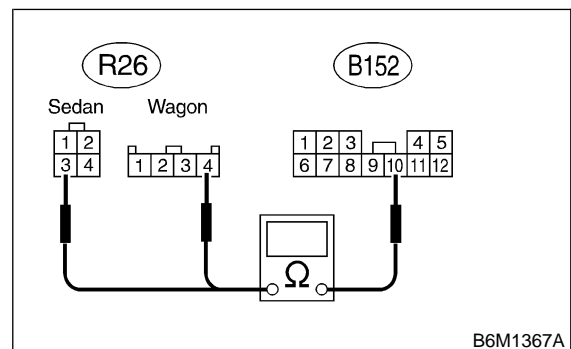


- CHECK** : *Is the resistance less than 10 Ω?*
YES : Go to step **6B14**.
NO : Repair wiring harness between rear clearance light RH and fuse box.

6B14 : CHECK HARNESS CONNECTOR BETWEEN REAR CLEARANCE LIGHT AND FUSE BOX.

- 1) Disconnect connector from rear clearance light LH.
- 2) Measure resistance between rear clearance light LH connector (R28) and fuse box connector (B152).

Connector & terminal
(R28) No. 3 (sedan), No. 4 (wagon) —
(B152) No. 10:

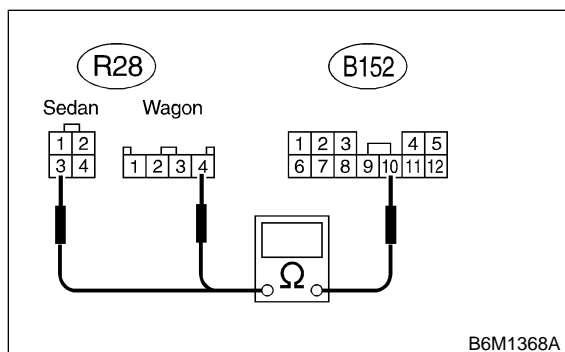


- CHECK** : **Is the resistance less than 10 Ω?**
- YES** : Go to step **6B15**.
- NO** : Repair wiring harness between rear clearance light LH and fuse box.

6B15 : CHECK HARNESS CONNECTOR BETWEEN REAR CLEARANCE LIGHT AND CHASSIS GROUND.

Measure resistance between rear clearance light RH connector (R26) and chassis ground.

Connector & terminal
(R26) No. 2 (+) — Chassis ground (-):

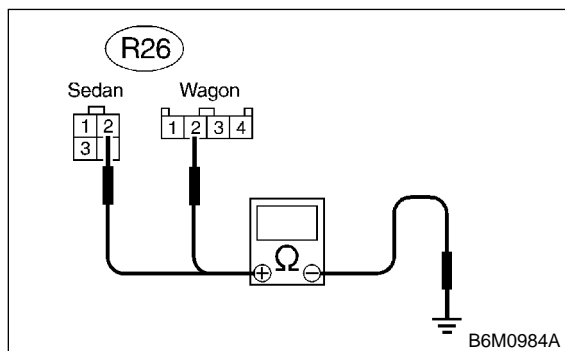


- CHECK** : **Is the resistance less than 10 Ω?**
- YES** : Go to step **6B16**.
- NO** : Repair wiring harness between rear clearance light RH and chassis ground.

6B16 : CHECK HARNESS CONNECTOR BETWEEN REAR CLEARANCE LIGHT AND CHASSIS GROUND.

Measure resistance between rear clearance light LH connector (R28) and chassis ground.

Connector & terminal
(R28) No. 2 (+) — Chassis ground (-):

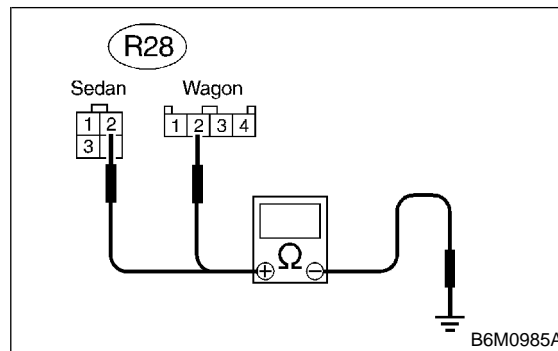


- CHECK** : **Is the resistance less than 10 Ω?**
- YES** : Replace security control module. <Ref. to 6-2 [W14A1].>
- NO** : Repair wiring harness between rear clearance light LH and chassis ground.

C: DIAGNOSTICS ITEM 2

6C1 : CHECK SECURITY INDICATOR LIGHT COMES ON.

- 1) Disconnect connector from security control module.
- 2) Measure resistance between security control module connector (B93) and chassis ground.

Connector & terminal
(B93) No. 9 (+) — Chassis ground (-):

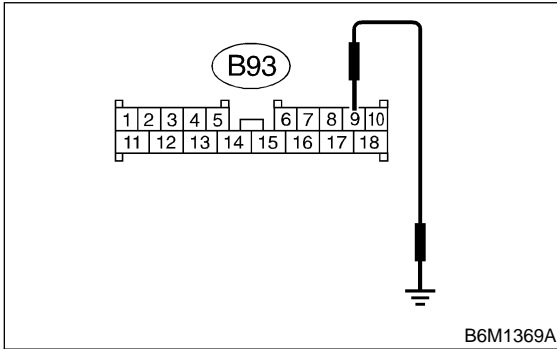


- CHECK** : Does the indicator light come on?
YES : Replace security control module. <Ref. to 6-2 [W14A1].>
NO : Go to step **6C2**.

6C2 : CHECK POWER SUPPLY FOR SECURITY INDICATOR LIGHT.

- 1) Disconnect connector from combination meter.
- 2) Measure voltage between combination meter connector (i12) and chassis ground.

Connector & terminal
(i12) No. 7 (+) — Chassis ground (-):

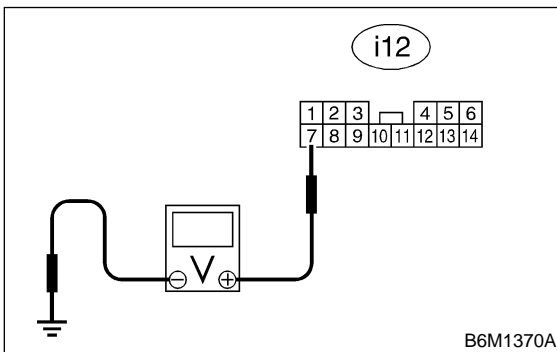


- CHECK** : Is the voltage more than 10 V?
YES : Go to step **6C3**.
NO : Repair wiring harness between security indicator light and main fuse box.

6C3 : CHECK HARNESS CONNECTOR BETWEEN SECURITY INDICATOR LIGHT AND SECURITY CONTROL MODULE.

Measure resistance between combination meter connector (i12) and security control module connector (B93).

Connector & terminal
(i12) No. 1 — (B93) No. 9:

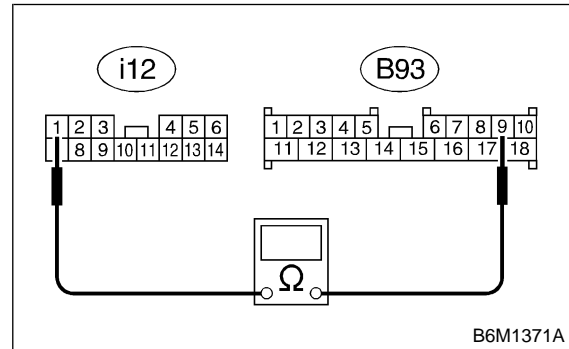


- CHECK** : Is the resistance less than 10 Ω?
YES : Replace security indicator light bulb. <Ref. to 6-2 [W8B0].>
NO : Repair wiring harness between security indicator light and security control module.

D: DIAGNOSTICS ITEM 3

6D1 : CHECK HARNESS CONNECTOR BETWEEN SECURITY CONTROL MODULE AND COMBINATION METER.

- 1) Disconnect connector from security control module and combination meter.
- 2) Measure resistance between security control module connector (B93) and combination meter connector (i10).

Connector & terminal
(B93) No. 5 — (i10) No. 23:

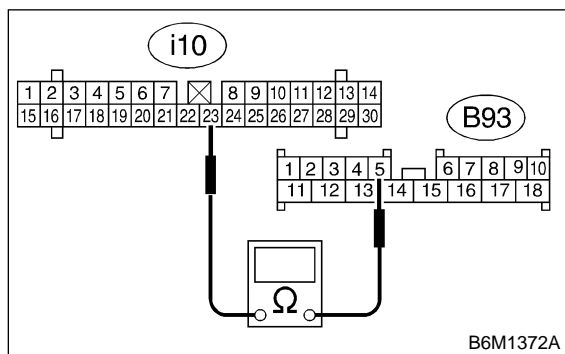


- CHECK** : **Is the resistance less than 10 Ω?**
- YES** : Go to step **6D2**.
- NO** : Repair wiring harness between security control module and combination meter.

6D2 : CHECK HARNESS CONNECTOR BETWEEN FRONT DOOR SWITCH LH AND COMBINATION METER.

- 1) Disconnect connector from front door switch LH.
- 2) Measure resistance between front door switch LH connector (R9) and combination meter connector (i10).

Connector & terminal
(R9) No. 1 — (i10) No. 7:

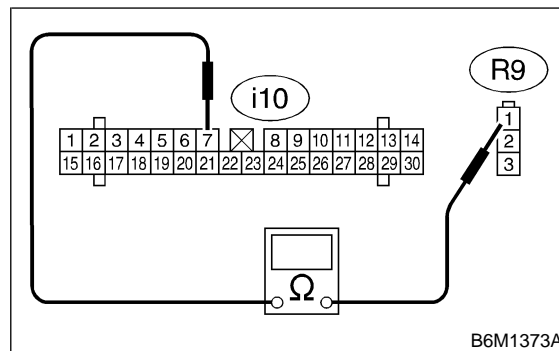


- CHECK** : **Is the resistance less than 10 Ω?**
- YES** : Go to step **6D3**.
- NO** : Repair wiring harness between front door switch LH and combination meter.

6D3 : CHECK HARNESS CONNECTOR BETWEEN FRONT DOOR SWITCH LH AND CHASSIS GROUND.

Measure resistance between front door switch LH (R9) and chassis ground.


Connector & terminal
(R9) No. 3 (+) — Chassis ground (-):

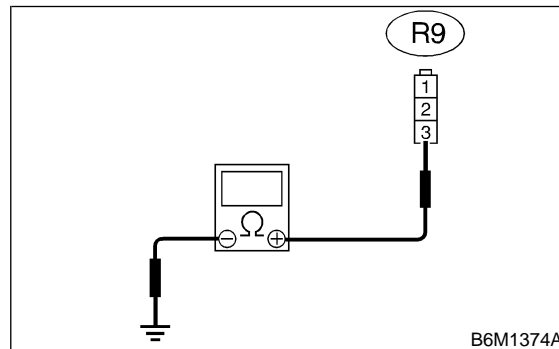

- CHECK** : **Is the resistance less than 10 Ω?**
- YES** : Go to step **6D4**.
- NO** : Repair wiring harness between front door switch LH and chassis ground.

6D4 : CHECK COMBINATION METER CIRCUIT.


- 1) Remove combination meter. <Ref. to 6-2 [W8A0].>
- 2) Measure resistance between combination meter terminals.

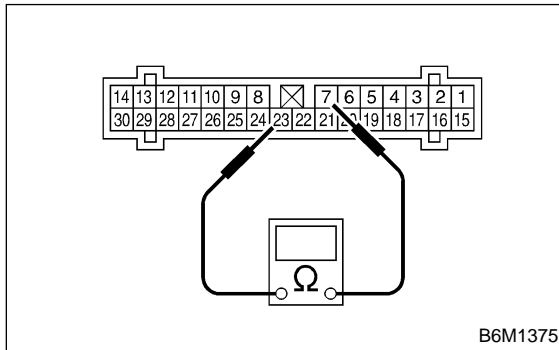Terminals**No. 23 — No. 7:**

- CHECK** : **Is the resistance less than 10 Ω?**
- YES** : Replace security control module. <Ref. to 6-2 [W14A1].>
- NO** : Repair or replace combination meter. <Ref. to 6-2 [W800].>

E: DIAGNOSTICS ITEM 4**6E1 : CHECK INPUT SIGNAL FOR STARTER MOTOR.**

- 1) Disconnect connector from starter motor.
- 2) Turn ignition switch to START.
- 3) Measure voltage between starter motor connector (B14) and engine ground.

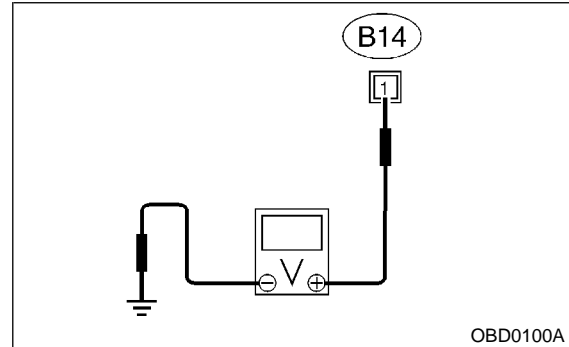Connector & terminal**(B14) No. 1 (+) — Engine ground (-):****NOTE:**

- On AT vehicles, place the selector lever in the P or N position.
- On MT vehicles, depress the clutch pedal.

- CHECK** : **Is the voltage more than 10 V?**
- YES** : Go to step **6E2**.
- NO** : Go to step **6E3**.

6E2 : CHECK GROUND CIRCUIT OF STARTER MOTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect terminal from starter motor.
- 3) Measure resistance between ground cable terminal and engine ground.

- CHECK** : **Is the resistance less than 5 Ω?**
- YES** : Check starter motor. <Ref. to 6-1 [W100].>
- NO** : Repair or replace ground cable.

6E3 : CHECK FUSE.

Remove and visually check the fuse SBF-1 (in main fuse box).

- CHECK** : **Is fuse SBF-1 blown?**
- YES** : Replace SBF fuse (100 A).
- NO** : Go to step **6E4**.


6E4 : CHECK FUSE.

Remove and visually check the fuse SBF-4 (in main fuse box).

- CHECK** : *Is fuse SBF-4 blown?*
- YES** : Replace SBF fuse (50 A).
- NO** : Go to step 6E5.

6E5 : CHECK INTERRUPT RELAY.


- 1) Turn ignition switch to OFF.
- 2) Remove interrupt relay (Near the fuse box).

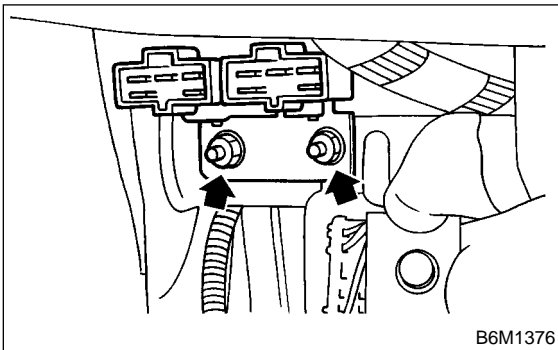

- 3) Check continuity between interrupt relay terminals.

Terminals

No. 1 — No. 4:

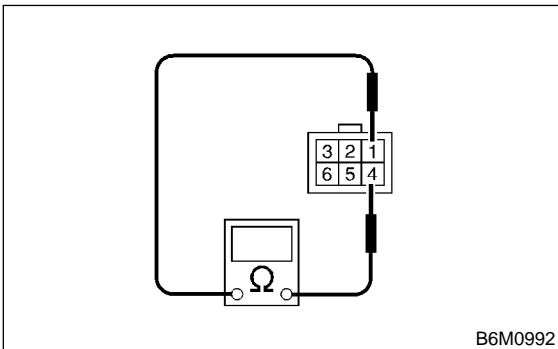


- CHECK** : *Does continuity exist?*
- YES** : Go to step 6E6.
- NO** : Replace interrupt relay.

6E6 : CHECK INTERRUPT RELAY.

Check continuity between interrupt relay terminals.

Terminals

No. 2 — No. 6:

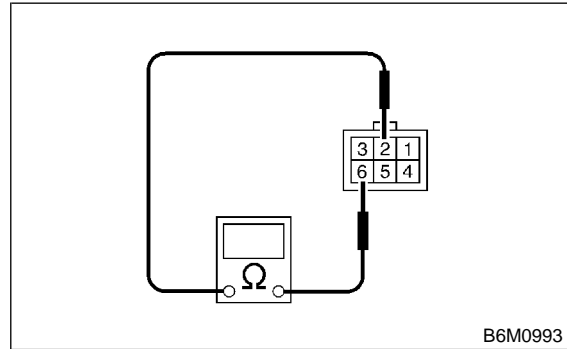


- CHECK** : *Does continuity exist?*
- YES** : Go to step 6E7.
- NO** : Replace interrupt relay.

6E7 : CHECK INTERRUPT RELAY.

- 1) Connect the battery to interrupt relay terminals No. 1 and No. 4.
- 2) Check continuity between interrupt relay terminals.

Terminals

No. 2 — No. 6:

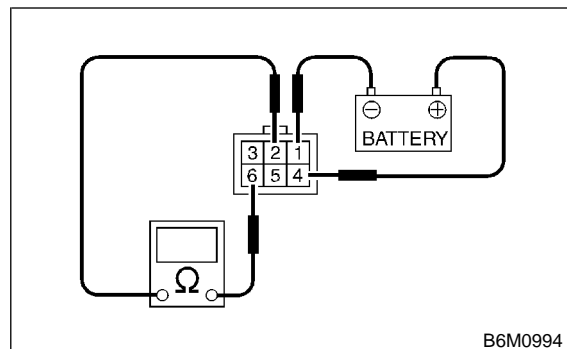


- CHECK** : *Does continuity exist?*
- YES** : Replace interrupt relay.
- NO** : Go to step 6E8.

6E8 : CHECK HARNESS CONNECTOR BETWEEN BATTERY AND SECURITY CONTROL MODULE.

- 1) Install the SBF-4 to main fuse box.
- 2) Install the interrupt relay.
- 3) Disconnect connector from security control module.
- 4) Turn ignition switch to START.
- 5) Measure voltage between security control module connector (B93) and chassis ground.

Connector & terminal

(B93) No. 15 (+) — Chassis ground (-):

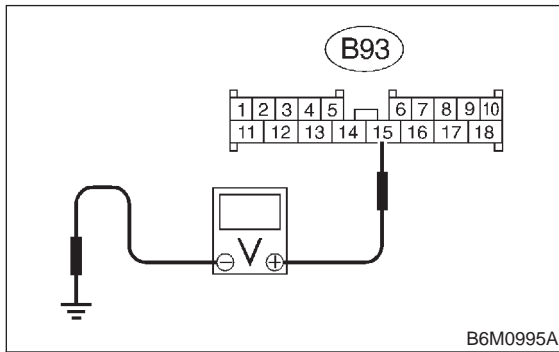

- CHECK** : *Is the voltage more than 10 V?*
- YES** : Go to step **6E9**.
- NO** : Repair wiring harness between security control module and battery.

6E9 : CHECK TRANSMISSION TYPE.


- CHECK** : *Is the transmission type AT?*
- YES** : Go to step **6E10**.
- NO** : Go to step **6E13**.

6E10 : CHECK HARNESS CONNECTOR BETWEEN INTERRUPT RELAY AND INHIBITOR SWITCH.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from inhibitor switch.
- 3) Turn ignition switch to START.
- 4) Measure voltage between inhibitor switch connector (T7) and chassis ground.

Connector & terminal

(T7) No. 12 (+) — Chassis ground (-):

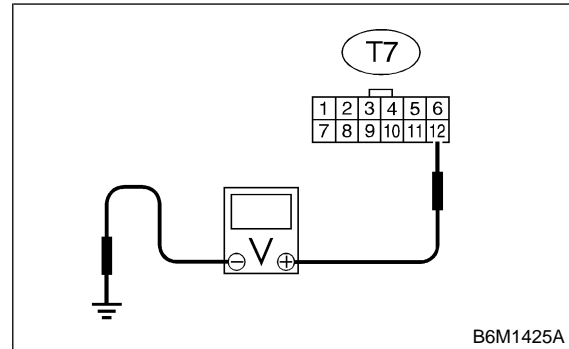


- CHECK** : *Is the voltage more than 10 V?*
- YES** : Go to step **6E11**.
- NO** : Repair wiring harness between interrupt relay and inhibitor switch.

6E11 : CHECK INHIBITOR SWITCH.

- 1) Place the selector lever in the P or N position.
- 2) Measure resistance between inhibitor switch terminals.

Terminals

No. 7 — No. 12:

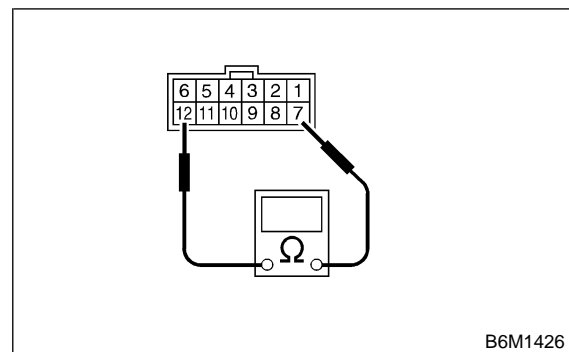


- CHECK** : *Is the resistance less than 1 Ω?*
- YES** : Go to step **6E12**.
- NO** : Replace inhibitor switch. <Ref. to 3-2 [W200].>

6E12 : CHECK HARNESS BETWEEN INHIBITOR SWITCH AND STARTER MOTOR.

Measure resistance between inhibitor switch connector (T7) and starter motor connector (B14).

Connector & terminal

(T7) No. 7 — (B14) No. 1:

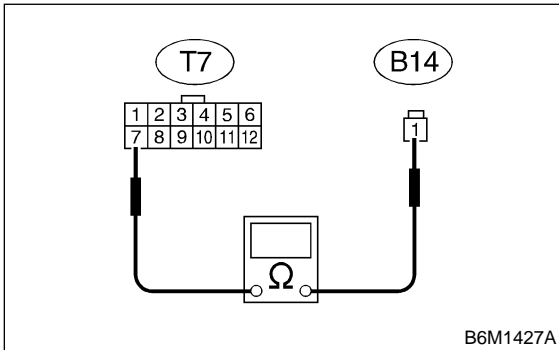


- CHECK** : **Is the resistance less than 10 Ω?**
- YES** : Replace security control module. <Ref. to 6-2 [W14A1].>
- NO** : Repair wiring harness between inhibitor switch and starter motor.

6E13 : CHECK STARTER INTERLOCK RELAY.

- 1) Turn ignition switch to OFF.
- 2) Remove starter interlock relay.
- 3) Check continuity between starter interlock relay terminals.

Terminals

No. 3 — No. 2:

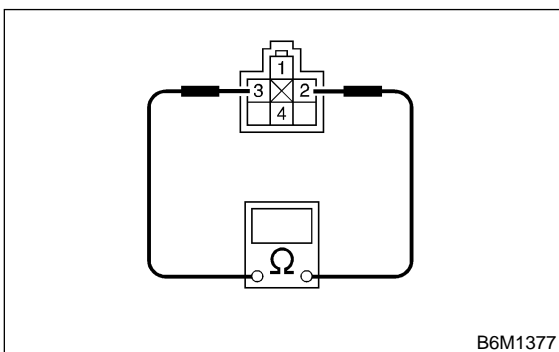


- CHECK** : **Does continuity exist?**
- YES** : Go to step **6E14**.
- NO** : Replace starter interlock relay.

6E14 : CHECK STARTER INTERLOCK RELAY.

Check continuity between starter interlock relay terminals.

Terminals

No. 1 — No. 4:

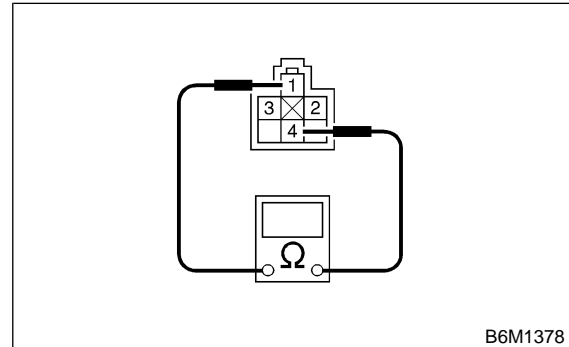


- CHECK** : **Does continuity exist?**
- YES** : Replace starter interlock relay.
- NO** : Go to step **6E15**.

6E15 : CHECK STARTER INTERLOCK RELAY.

- 1) Connect the battery to starter interlock relay terminals No. 3 and No. 2.
- 2) Check continuity between starter interlock relay terminals.

Terminals

No. 1 — No. 4:

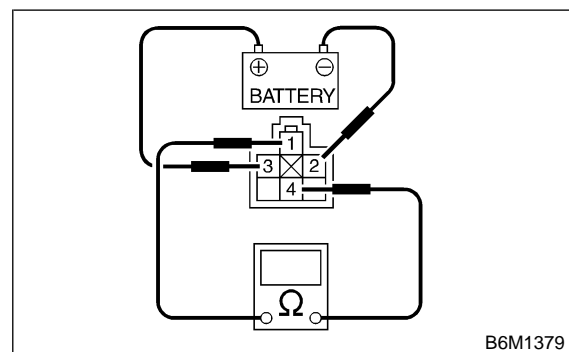

- CHECK** : **Does continuity exist?**
- YES** : Go to step **6E16**.
- NO** : Replace starter interlock relay.

6E16 : CHECK CLUTCH SWITCH.

- 1) Install starter interlock relay.
- 2) Measure resistance between clutch switch connector (B106), (B107) terminals while depressing the clutch pedal.


Connector & terminal

With cruise control

(B107) No. 1 — No. 2:

Without cruise control

(B106) No. 1 — No. 2:

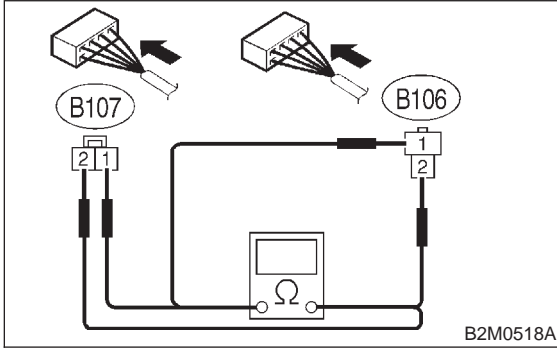


- CHECK** : **Is the resistance less than 10 Ω?**
- YES** : Go to step **6E17**.
- NO** : Replace clutch switch.

6E17 : CHECK HARNESS BETWEEN INTERRUPT RELAY AND STARTER MOTOR.

- 1) Disconnect connector from starter motor.
- 2) Turn ignition switch to START.
- 3) Measure voltage between starter motor connector (B14) and chassis ground while depressing the clutch pedal.

Connector & terminal

(B14) No. 1 (+) — Chassis ground (-):

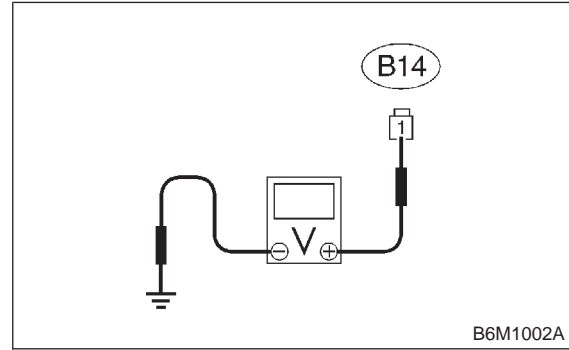


- CHECK** : **Is the voltage more than 10 V?**
- YES** : Replace security control module. <Ref. to 6-2 [W14A1].>
- NO** : Repair wiring harness between interrupt relay and starter motor.

F: DIAGNOSTICS ITEM 5

6F1 : CHECK HARNESS CONNECTOR BETWEEN SECURITY CONTROL MODULE AND COMBINATION METER.

- 1) Disconnect connector from security control module and combination meter.
- 2) Measure resistance between security control module connector (B93) and combination meter connector (i10).

Connector & terminal
(B93) No. 5 — (i10) No. 23:

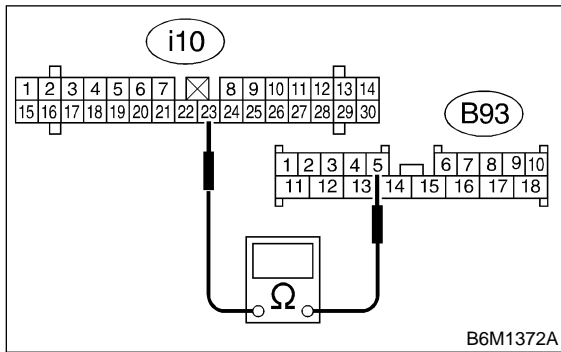


- CHECK** : **Is the resistance less than 10 Ω?**
- YES** : Go to step **6F2**.
- NO** : Repair wiring harness between security control module and combination meter.

6F2 : CHECK HARNESS CONNECTOR BETWEEN FRONT DOOR SWITCH RH AND COMBINATION METER.

- 1) Disconnect connector from front door switch RH.
- 2) Measure resistance between front door switch RH connector (R12) and combination meter connector (i10).

Connector & terminal
(R12) No. 1 — (i10) No. 28:

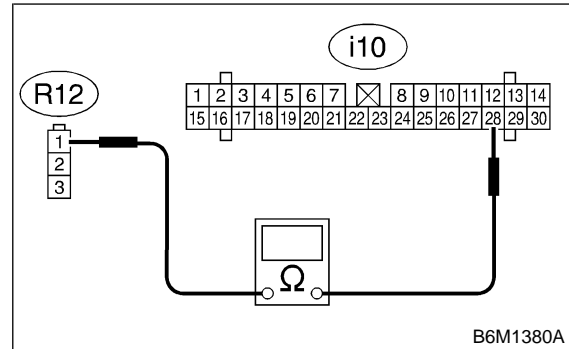


- CHECK** : **Is the resistance less than 10 Ω?**
- YES** : Go to step **6F3**.
- NO** : Repair wiring harness between front door switch RH and combination meter.

6F3 : CHECK COMBINATION METER CIRCUIT.

- 1) Remove combination meter.
<Ref. to 6-2 [W8A0].>
- 2) Measure resistance between combination meter terminals.

Terminals

No. 28 — No. 23:

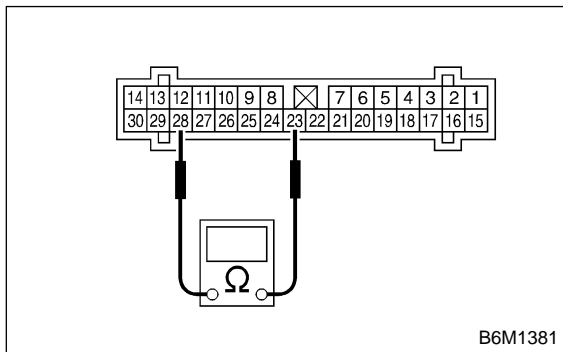

- CHECK** : **Is the resistance less than 10 Ω?**
- YES** : Replace security control module. <Ref. to 6-2 [W14A1].>
- NO** : Repair or replace combination meter. <Ref. to 6-2 [W800].>


G: DIAGNOSTIC ITEM 6

6G1 : CHECK HARNESS CONNECTOR BETWEEN SECURITY CONTROL MODULE AND COMBINATION METER.

- 1) Disconnect connector from security control module and combination meter.
- 2) Measure resistance between security control module connector (B93) and combination meter connector (i10).

Connector & terminal

(B93) No. 5 — (i10) No. 23:

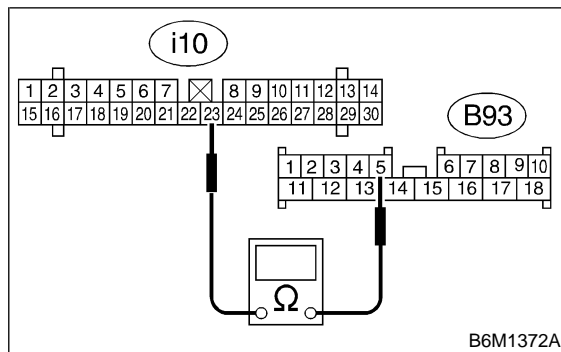


- CHECK** : **Is the resistance less than 10 Ω?**
- YES** : Go to step **6G2**.
- NO** : Repair wiring harness between security control module and combination meter.

6G2 : CHECK HARNESS CONNECTOR BETWEEN REAR DOOR SWITCH LH AND COMBINATION METER.

- 1) Disconnect connector from rear door switch LH.
- 2) Measure resistance between rear door switch LH connector (R22) and combination meter connector (i10).

Connector & terminal
(R22) No. 1 — (i10) No. 10:

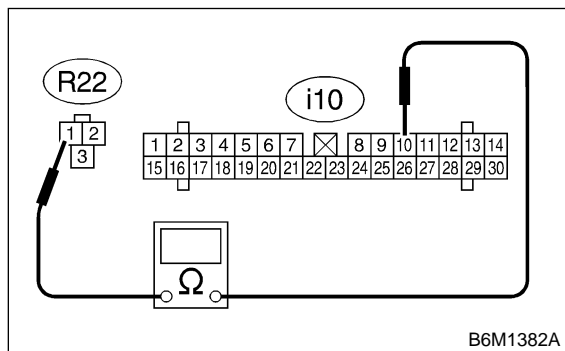


- CHECK** : **Is the resistance less than 10 Ω?**
YES : Go to step 6G3.
NO : Repair wiring harness between rear door switch LH and combination meter.

6G3 : CHECK COMBINATION METER CIRCUIT.

- 1) Remove combination meter. <Ref. to 6-2 [W8A0].>
- 2) Measure resistance between combination meter terminals.

Terminals
No. 10 — No. 23:

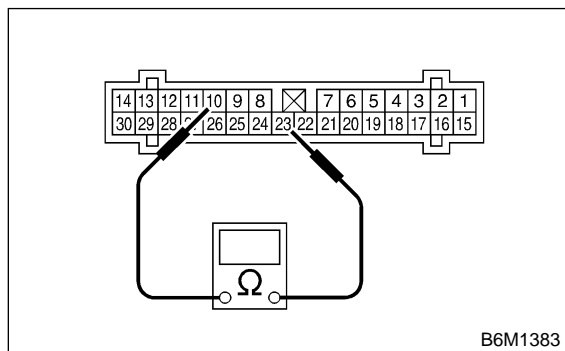


- CHECK** : **Is the resistance less than 10 Ω?**
YES : Replace security control module. <Ref. to 6-2 [W14A1].>
NO : Repair or replace combination meter. <Ref. to 6-2 [W800].>

H: DIAGNOSTIC ITEM 7

6H1 : CHECK HARNESS CONNECTOR BETWEEN SECURITY CONTROL MODULE AND COMBINATION METER.

- 1) Disconnect connector from security control module and combination meter.
- 2) Measure resistance between security control module connector (B93) and combination meter connector (i10).

Connector & terminal
(B93) No. 5 — (i10) No. 23:

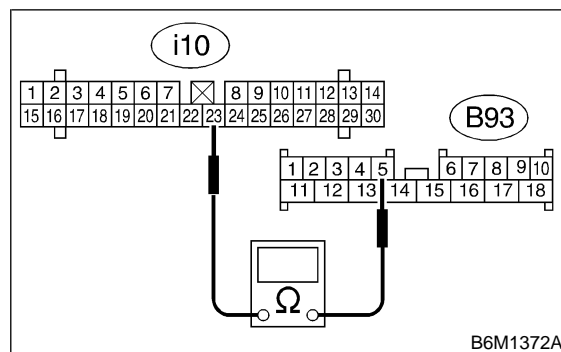


- CHECK** : **Is the resistance less than 10 Ω?**
YES : Go to step 6H2.
NO : Repair wiring harness between security control module and combination meter.

6H2 : CHECK HARNESS CONNECTOR BETWEEN REAR DOOR SWITCH RH AND COMBINATION METER.

- 1) Disconnect connector from rear door switch RH.
- 2) Measure resistance between rear door switch RH connector (R16) and combination meter connector (i10).

Connector & terminal

(R16) No. 1 — (i10) No. 29:

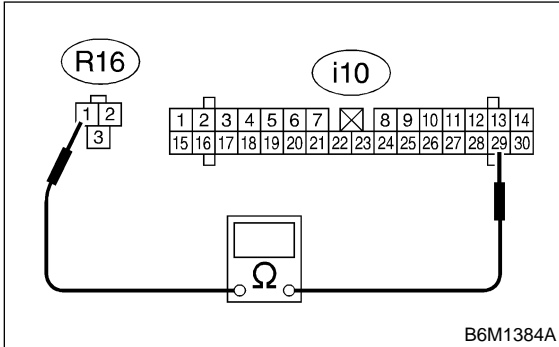


- CHECK** : **Is the resistance less than 10 Ω?**
- YES** : Go to step **6H3**.
- NO** : Repair wiring harness between rear door switch RH and combination meter.

6H3 : CHECK COMBINATION METER CIRCUIT.

- 1) Remove combination meter. <Ref. to 6-2 [W8A0].>
- 2) Measure resistance between combination meter terminals.

Terminals

No. 29 — No. 23:

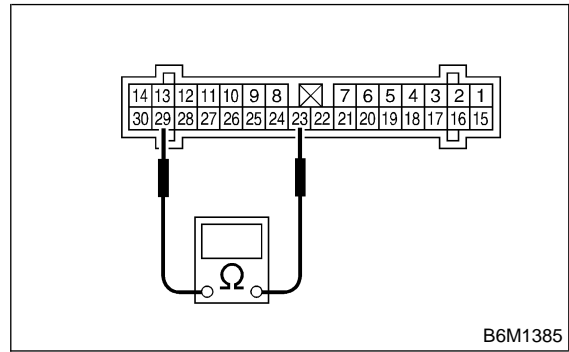


- CHECK** : **Is the resistance less than 10 Ω?**
- YES** : Replace security control module. <Ref. to 6-2 [W14A1].>
- NO** : Repair or replace combination meter. <Ref. to 6-2 [W800].>

I: DIAGNOSTIC ITEM 8

6I1 : CHECK HARNESS CONNECTOR BETWEEN REAR GATE LATCH SWITCH AND SECURITY CONTROL MODULE.

- 1) Disconnect connector from rear gate latch switch and security control module.
- 2) Measure resistance between rear gate latch switch connector (D46) and security control module connector (B93).

Connector & terminal
(D46) No. 1 — (B93) No. 4:

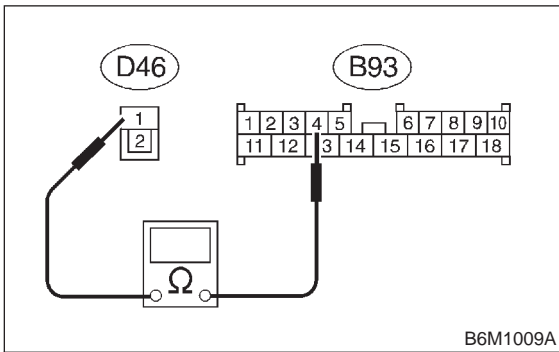


- CHECK** : *Is the resistance less than 10 Ω?*
- YES** : Go to step 6I2.
- NO** : Repair wiring harness between rear gate latch switch and security control module.

6I2 : CHECK HARNESS CONNECTOR BETWEEN REAR GATE LATCH SWITCH AND CHASSIS GROUND.

Measure resistance between rear gate latch switch connector (D46) and chassis ground.

Connector & terminal
(D46) No. 2 (+) — Chassis ground (-):

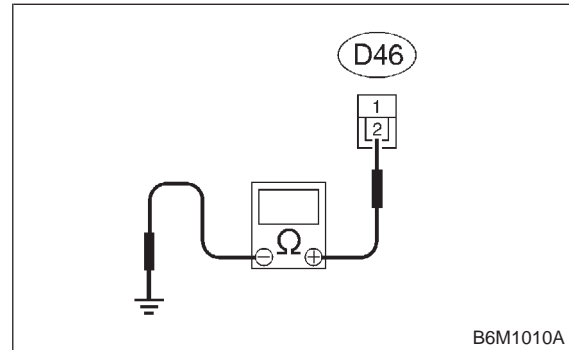


- CHECK** : *Is the resistance less than 10 Ω?*
- YES** : Go to step 6I3.
- NO** : Repair wiring harness between rear gate latch switch and chassis ground.

6I3 : CHECK REAR GATE LATCH SWITCH.

Measure resistance between rear gate latch switch terminals.

Terminals
No. 1 — No. 2:

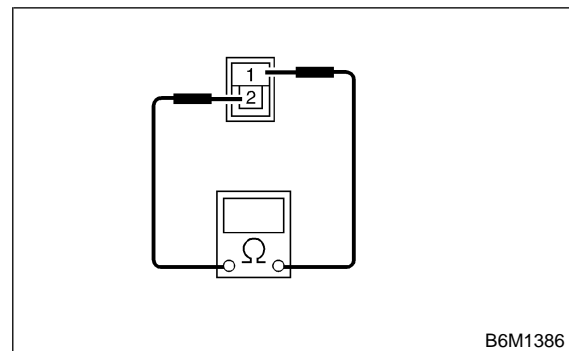


- CHECK** : *Is the resistance less than 10 Ω?*
- YES** : Go to step 6I4.
- NO** : Replace rear gate latch switch.

6I4 : CHECK REAR GATE LATCH SWITCH.

Measure resistance between rear gate latch switch terminals while pushing the switch.

Terminals

No. 1 — No. 2:

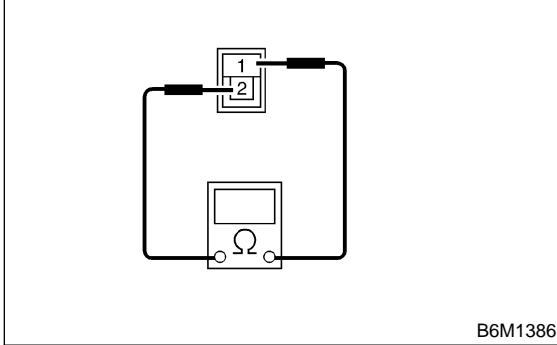

- CHECK** : **Is the resistance less than 10 Ω?**
- YES** : Replace rear gate latch switch.
- NO** : Replace security control module. <Ref. to 6-2 [W14A1].>


J: DIAGNOSTIC ITEM 9

6J1 : CHECK HARNESS CONNECTOR BETWEEN TRUNK ROOM LIGHT SWITCH AND SECURITY CONTROL MODULE.

- 1) Disconnect connector from trunk room light switch and security control module.
- 2) Measure resistance between trunk room light switch connector (R27) and security control module connector (B93).

Connector & terminal

(R27) No. 1 — (B93) No. 4:

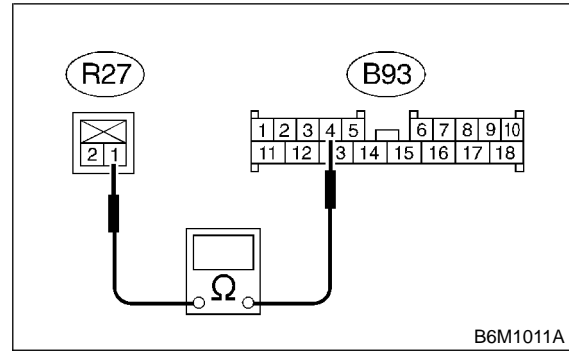


- CHECK** : **Is the resistance less than 10 Ω?**
- YES** : Go to step **6J2**.
- NO** : Repair wiring harness between trunk room light switch and security control module.

6J2 : CHECK HARNESS CONNECTOR BETWEEN TRUNK ROOM LIGHT SWITCH AND CHASSIS GROUND.

Measure resistance between trunk room light switch connector (R27) and chassis ground.

Connector & terminal

(R27) No. 2 (+) — Chassis ground (-):

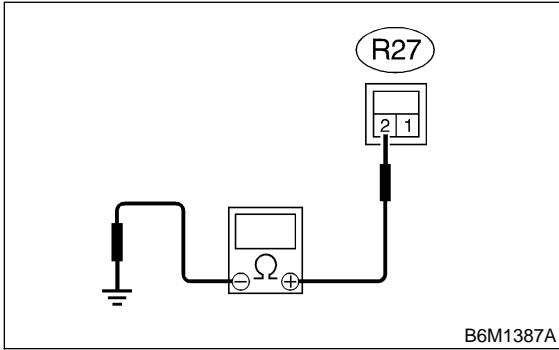


- CHECK** : **Is the resistance less than 10 Ω?**
- YES** : Go to step **6J3**.
- NO** : Repair wiring harness between trunk room light switch and chassis ground.

6J3 : CHECK TRUNK ROOM LIGHT SWITCH.

Measure resistance between trunk room light switch terminals.

Terminals

No. 1 — No. 2:

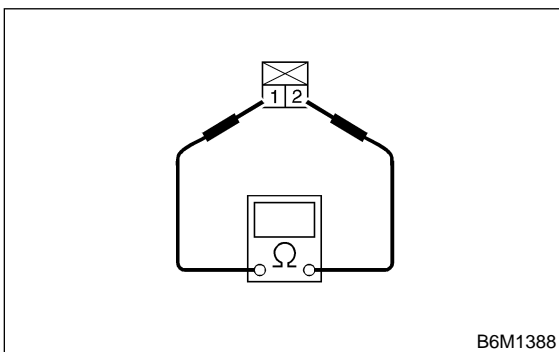


- CHECK** : **Is the resistance less than 10 Ω?**
- YES** : Go to step **6J4**.
- NO** : Replace trunk room light switch.

6J4 : CHECK TRUNK ROOM LIGHT SWITCH.

Measure resistance between trunk room light switch terminals while pushing the switch.

Terminals

No. 1 — No. 2:

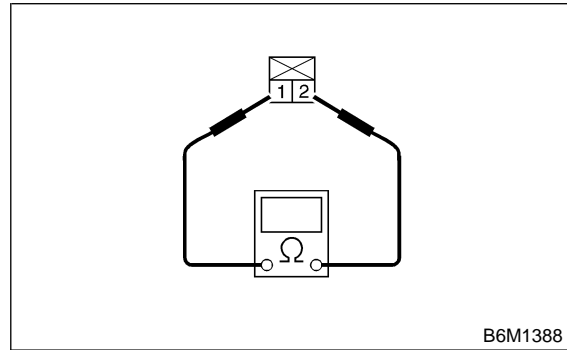

- CHECK** : **Is the resistance less than 10 Ω?**
- YES** : Replace trunk room light switch.
- NO** : Replace security control module. <Ref. to 6-2 [W14A1].>

K: DIAGNOSTIC ITEM 10

6K1 : CHECK SECURITY CONTROL MODULE.


Check and ensure that security control module is installed on the bracket. <Ref. to 6-2 [W14A1].>

- CHECK** : *Is the security control module securely installed?*
- YES** : Go to step **6K2**.
- NO** : Securely install security control module. <Ref. to 6-2 [W14A1].>

6K2 : ADJUST SENSITIVITY.

- 1) Remove security control module. <Ref. to 6-2 [W14A1].>
- 2) Adjust the sensitivity adjust screw in security control module.

NOTE:
After adjusting, be sure to plug the adjust screw hole.

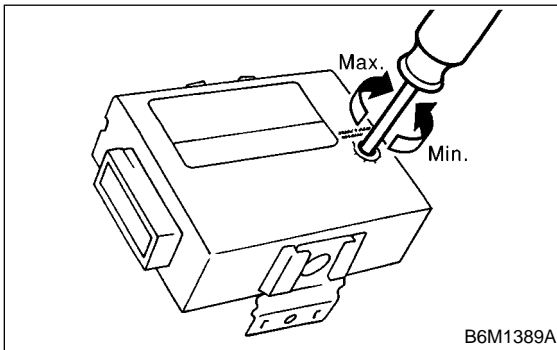

- 3) Install security control module. <Ref. to 6-2 [W14A1].>
- 4) Perform impact sensitivity test. <Ref. to 6-2c [T6A18].>


- CHECK** : *Is the sensitivity adjustment possible?*
- YES** : Impact sensitivity is normal.
- NO** : Replace security control module. <Ref. to 6-2 [W14A1].>

L: DIAGNOSTIC ITEM 11

6L1 : CHECK PASSIVE ARM CIRCUIT.

- 1) Connect connector (B183) and (B184) at front pillar lower.
- 2) Disconnect connector from security control module.
- 3) Measure resistance between security control module (B93) and chassis ground.

Connector & terminal
(B93) No. 3 (+) — Chassis ground (-):

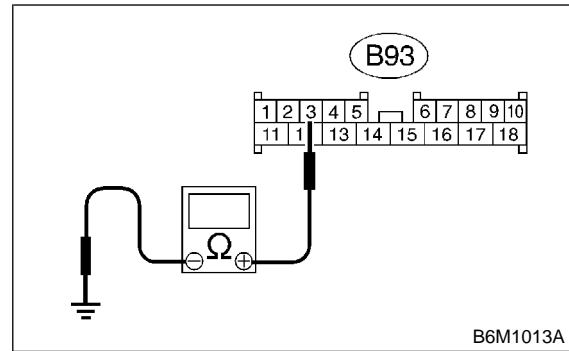


- CHECK** : *Is the resistance less than 10 Ω?*
- YES** : Replace security control module. <Ref. to 6-2 [W14A1].>
- NO** : Repair wiring harness between security control module and chassis ground.

M: DIAGNOSTIC ITEM 12

6M1 : CHECK SECURITY HORN RELAY.


1) Remove security horn relay. (Near the fuse box).

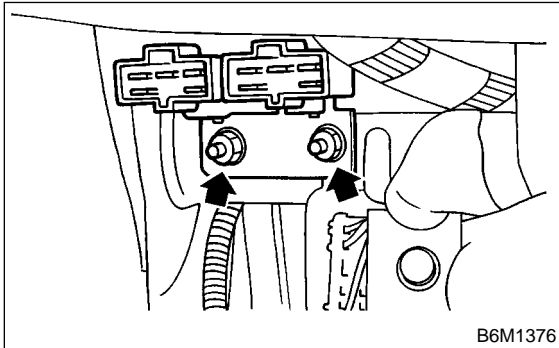

2) Check continuity between security horn relay terminals.

Terminals

No. 1 — No. 4:

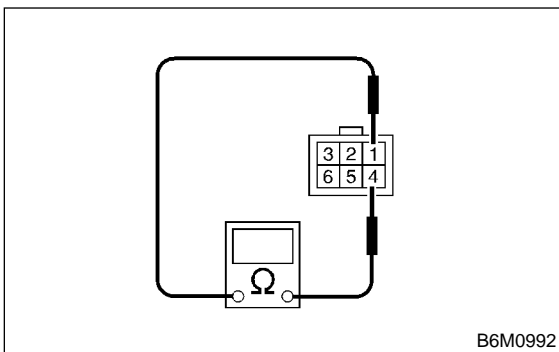


- CHECK** : Does continuity exist?
- YES** : Go to step 6M2.
- NO** : Replace security horn relay.

6M2 : CHECK SECURITY HORN RELAY.

Check continuity between security horn relay terminals.

Terminals

No. 2 — No. 3:

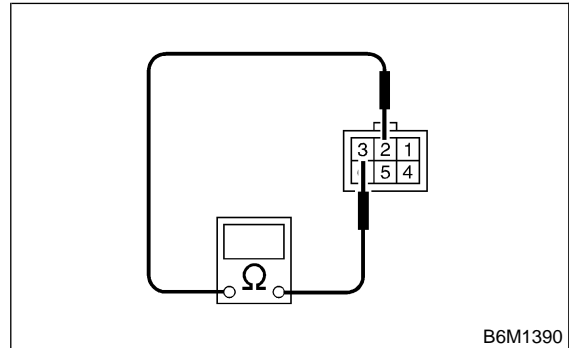


- CHECK** : Does continuity exist?
- YES** : Replace security horn relay.
- NO** : Go to step 6M3.

6M3 : CHECK SECURITY HORN RELAY.

1) Connect the battery to security horn relay terminals No. 1 and No. 4.
2) Check continuity between security horn relay terminals.

Terminals

No. 2 — No. 3:

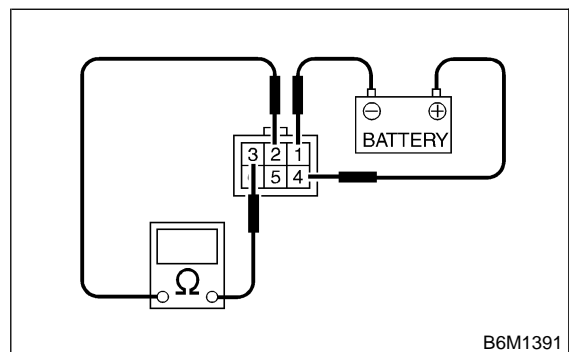


- CHECK** : Does continuity exist?
- YES** : Go to step 6M4.
- NO** : Replace security horn relay.

6M4 : CHECK POWER SUPPLY FOR SECURITY HORN RELAY.

Measure voltage between security horn relay connector (B243) and chassis ground.

Connector & terminal

(B243) No. 1 (+) — Chassis ground (-):

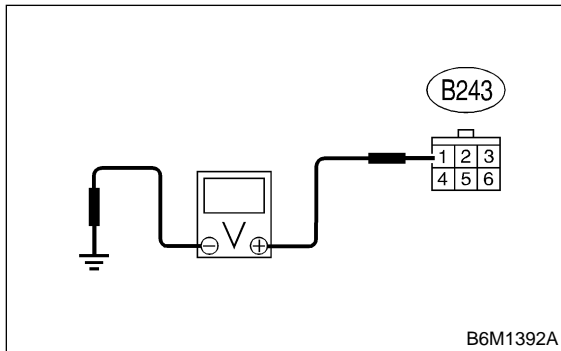


- CHECK** : *Is the voltage more than 10 V?*
- YES** : Go to step **6M5**.
- NO** : Repair wiring harness between security horn relay and battery.

6M5 : CHECK POWER SUPPLY FOR SECURITY HORN RELAY.

Measure voltage between security horn relay connector (B243) and chassis ground.

Connector & terminal

(B243) No. 2 (+) — Chassis ground (-):

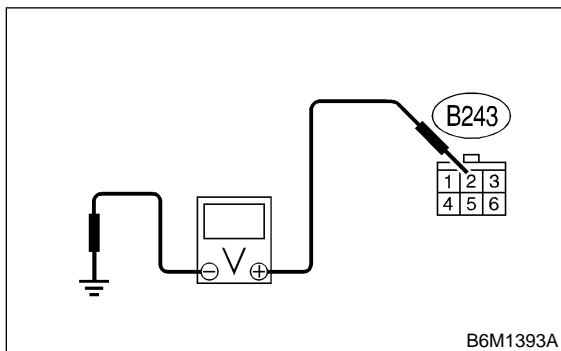


- CHECK** : *Is the voltage more than 10 V?*
- YES** : Go to step **6M6**.
- NO** : Repair wiring harness between security horn relay and battery.

6M6 : CHECK HARNESS BETWEEN SECURITY HORN RELAY AND SECURITY CONTROL MODULE.

- 1) Disconnect connector from security control module.
- 2) Measure resistance between security horn relay connector (B243) and security control module connector (B93).

Connector & terminal

(B243) No. 3 — (B93) No. 18:

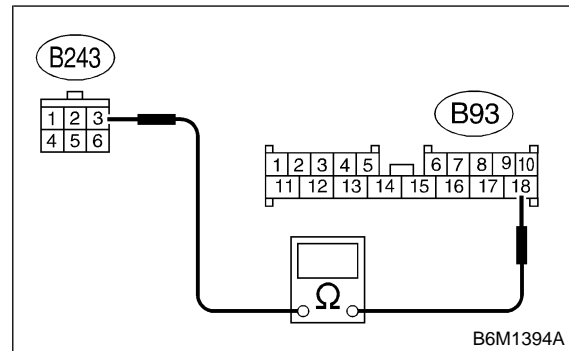


- CHECK** : *Is the resistance less than 10 Ω?*
- YES** : Go to step **6M7**.
- NO** : Repair wiring harness between security horn relay and security control module.

6M7 : CHECK HARNESS BETWEEN SECURITY HORN RELAY AND SECURITY CONTROL MODULE.

Measure resistance between security horn relay connector (B243) and security control module connector (B93).

Connector & terminal

(B243) No. 4 — (B93) No. 16:

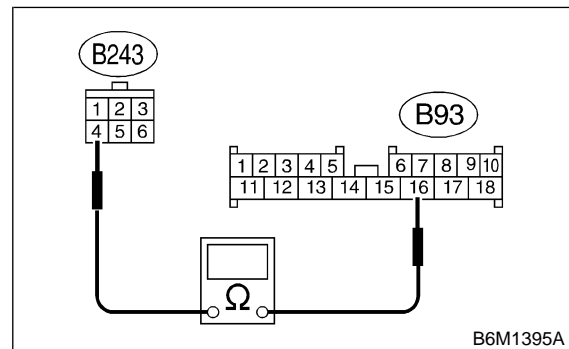


- CHECK** : *Is the resistance less than 10 Ω?*
- YES** : Go to step **6M8**.
- NO** : Repair wiring harness between security horn relay and security control module.

6M8 : CHECK HARNESS BETWEEN SECURITY HORN RELAY AND SECURITY CONTROL MODULE.

- 1) Disconnect connector from security horn.
- 2) Measure resistance between security horn connector (B204) and security control module connector (B93).

Connector & terminal


(B204) No. 1 — (B93) No. 17:

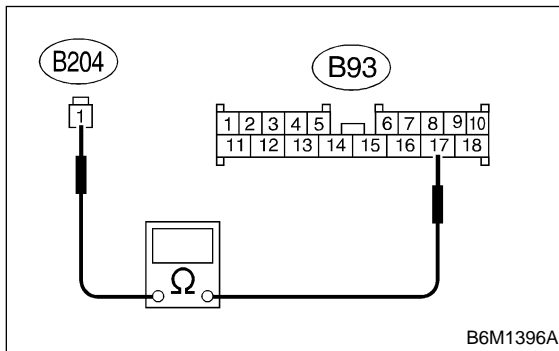

- CHECK** : **Is the resistance less than 10 Ω?**
- YES** : Go to step **6M9**.
- NO** : Repair wiring harness between security horn and security control module.

6M9 : CHECK SECURITY HORN.

- 1) Remove security horn. <Ref. to 6-2 [W14A2].>
- 2) Connect battery to security horn and check sound of security horn.

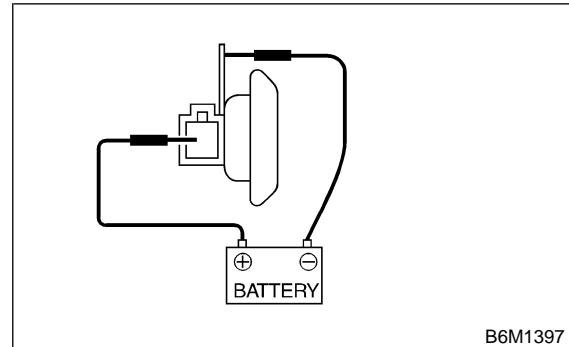

- CHECK** : **Does the security horn sound?**
- YES** : Replace security control module. <Ref. to 6-2 [W14A1].>
- NO** : Repair security horn. <Ref. to 6-2 [W14A2].>

MEMO: