

B: INSPECTION

Using accurate tester, inspect the following items, and replace if defective.

- 1) Primary resistance
- 2) Secondary coil resistance

CAUTION:

If the resistance is extremely low, this indicates the presence of a short-circuit.

Specified resistance:


[Primary side]

Between terminal No. 1 and No. 2

$0.73 \Omega \pm 10\%$

Between terminal No. 2 and No. 4

$0.73 \Omega \pm 10\%$

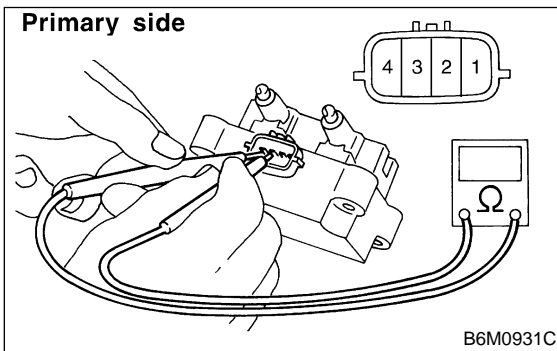


[Secondary side]

Between (A) and (B)

$12.8 \text{ k}\Omega \pm 15\%$

Between (C) and (D)

$12.8 \text{ k}\Omega \pm 15\%$

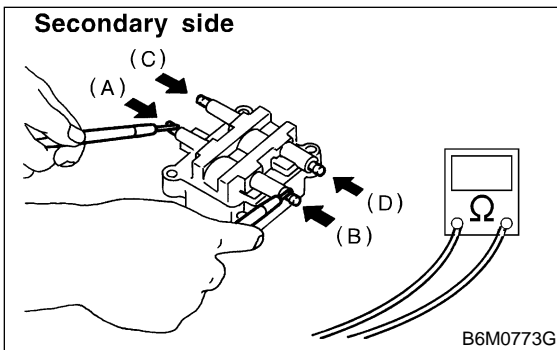

- 3) Insulation between primary terminal and case:
10 MΩ or more.

5. Spark Plug Cord

A: INSPECTION

Check for:

- 1) Damage to cords, deformation, burning or rust formation of terminals
- 2) Resistance values of cords

Resistance value:

#1 cord: 7.40 — 17.27

#2 cord: 6.24 — 14.56

#3 cord: 6.54 — 15.25

#4 cord: 6.59 — 15.37

