


## 5. Specified Data

### A: ENGINE CONTROL MODULE (ECM) I/O SIGNAL FOR MT VEHICLES

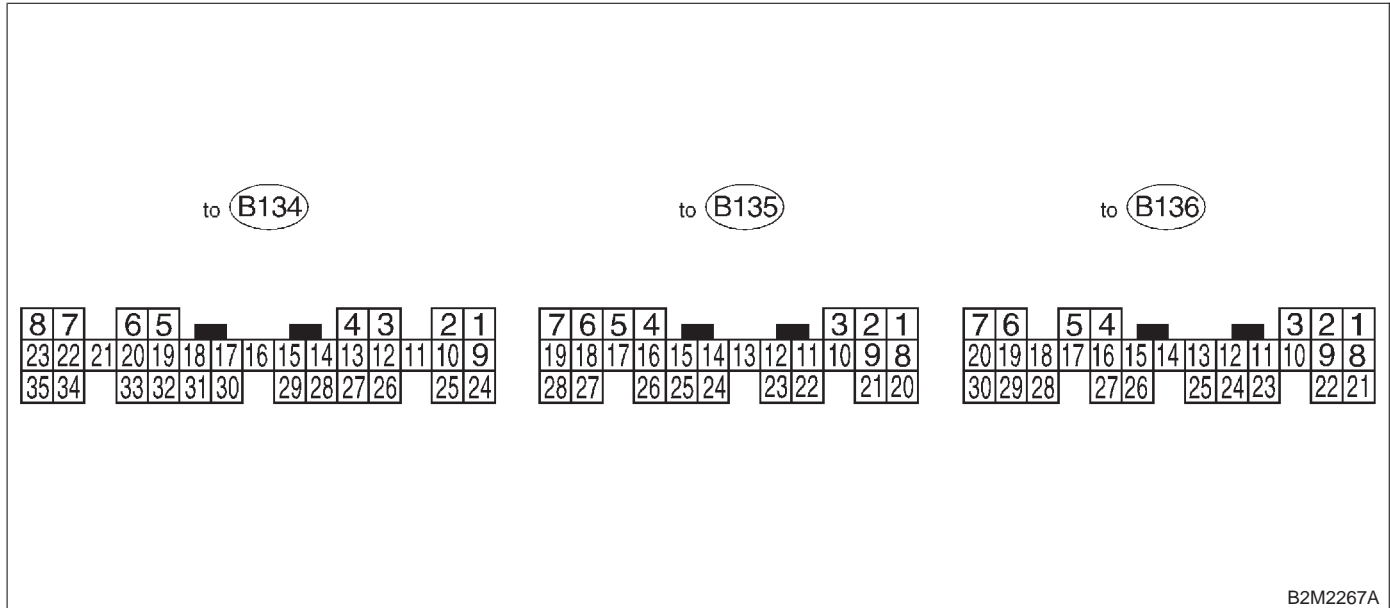

B2M2267A


Content		Connector No.	Terminal No.	Signal (V)		Note
				Ignition SW ON (Engine OFF)	Engine ON (Idling)	
Crankshaft position sensor	Signal (+)	B135	1	0	-7 — +7	Sensor output waveform
	Signal (-)	B135	8	0	0	—
	Shield	B135	10	0	0	—
Camshaft position sensor	Signal (+)	B135	2	0	-7 — +7	Sensor output waveform
	Signal (-)	B135	9	0	0	—
	Shield	B135	10	0	0	—
Throttle position sensor	Signal	B136	17	Fully closed: 0.2 — 1.0 Fully opened: 4.2 — 4.7		—
	Power supply	B136	15	5	5	—
	GND (sensor)	B136	16	0	0	—
Rear oxygen sensor	Signal	B136	18	0	0 — 0.9	—
	Shield	B136	24	0	0	—
	GND sensor	B136	16	0	0	—
Front oxygen (A/F) sensor heater	Signal 1	B134	22	0.5 — 13	0.5 — 14	Waveform
	Signal 2	B134	23	0.5 — 13	0.5 — 14	Waveform
	Power supply monitor	B136	3	10 — 13	13 — 14	—
Rear oxygen sensor heater	Signal	B134	21	0.5 — 13	0.5 — 14	Waveform
	Power supply monitor	B136	3	10 — 13	13 — 14	—
Engine coolant temperature sensor	Signal	B136	14	1.0 — 1.4	1.0 — 1.4	After warm-up the engine.
	GND (sensor)	B136	16	0	0	After warm-up the engine.
Vehicle speed signal		B135	24	0 or 5	0 or 5	"5" and "0" are repeatedly displayed when vehicle is driven.
Starter switch		B135	28	0	0	Cranking: 8 — 14

Content	Connector No.	Terminal No.	Signal (V)		Note	
			Ignition SW ON (Engine OFF)	Engine ON (Idling)		
A/C switch	B135	27	ON: 10 — 13 OFF: 0	ON: 13 — 14 OFF: 0	—	
Ignition switch	B135	7	10 — 13	13 — 14	—	
Neutral position switch	B135	26	ON: 12±0.5 OFF: 0		On MT vehicle; switch is ON when gear is in neutral position.	
Test mode connector	B135	14	5	5	When connected: 0	
Knock sensor	Signal	B136	4	2.5	2.5	—
	Shield	B136	25	0	0	—
Back-up power supply	B136	9	10 — 13	13 — 14	Ignition switch "OFF": 10 — 13	
Control unit power supply	B136	1	10 — 13	13 — 14	—	
	B136	2	10 — 13	13 — 14	—	
Sensor power supply	B136	15	5	5	—	
Line end check 1	B135	20	0	0	—	
Ignition control	#1, #2	B134	25	0	1 — 3.4	Waveform
	#3, #4	B134	26	0	1 — 3.4	Waveform
Fuel injector	#1	B134	4	10 — 13	1 — 14	Waveform
	#2	B134	13	10 — 13	1 — 14	Waveform
	#3	B134	14	10 — 13	1 — 14	Waveform
	#4	B134	15	10 — 13	1 — 14	Waveform
Idle air control solenoid valve	Signal	B134	5	—	1 — 13	Waveform
	Power supply	B136	2	10 — 13	13 — 14	—
	GND (power)	B134	8	0	0	—
Fuel pump relay control	B134	16	ON: 0.5, or less OFF: 10 — 13	0.5, or less	—	
A/C relay control	B134	17	ON: 0.5, or less OFF: 10 — 13	ON: 0.5, or less OFF: 13 — 14	—	
Radiator fan relay 1 control	B134	3	ON: 0.5, or less OFF: 10 — 13	ON: 0.5, or less OFF: 13 — 14	—	
Radiator fan relay 2 control	B134	12	ON: 0.5, or less OFF: 10 — 13	ON: 0.5, or less OFF: 13 — 14	With A/C vehicles only	
Self-shutoff control	B135	19	10 — 13	13 — 14	—	
Malfunction indicator lamp	B134	11	—	—	Light "ON": 1, or less Light "OFF": 10 — 14	
Engine speed output	B134	30	—	0 — 13, or more	Waveform	
Purge control solenoid valve	B134	2	ON: 1, or less OFF: 10 — 13	ON: 1, or less OFF: 13 — 14	—	
Intake manifold pressure sensor	Signal	B136	5	3.4 — 3.6	1.2 — 1.8	—
	Power supply	B136	15	5	5	—
	GND (sensor)	B136	16	0	0	—
Fuel temperature sensor	B136	26	2.5 — 3.8	2.5 — 3.8	Ambient temperature: 25°C (75°F)	
Fuel level sensor	B136	27	0.12 — 4.75	0.12 — 4.75	—	

Content		Connector No.	Terminal No.	Signal (V)		Note
				Ignition SW ON (Engine OFF)	Engine ON (Idling)	
Fuel tank pressure sensor	Signal	B136	12	2.3 — 2.7	2.3 — 2.7	The value obtained after the fuel filler cap was removed once and recapped.
	Power supply	B136	15	5	5	—
	GND (sensor)	B136	16	0	0	—
Fuel tank pressure control solenoid valve	B134	1	ON: 1, or less OFF: 10 — 13	ON: 1, or less OFF: 13 — 14	—	
Drain valve	B134	10	ON: 1, or less OFF: 10 — 13	ON: 1, or less OFF: 13 — 14	—	
Small light switch	B135	18	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	—	
Blower fan switch	B135	5	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	—	
Rear defogger switch	B135	6	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	—	
Front oxygen (A/F) sensor signal 1	B136	7	3.7 — 3.9	3.7 — 3.9	—	
Front oxygen (A/F) sensor signal 2	B136	20	2.6 — 4.4	3.4 — 3.6	—	
SSM/GST communication line	B135	3	Less than 1 ↔ More than 4	Less than 1 ↔ More than 4	—	
Intake air temperature sensor	B136	13	3.0 — 3.4	3.0 — 3.4	Intake air temperature: 25°C (75°F)	
Line end check 2	B135	21	5	5	—	
GND (sensors)	B136	16	0	0	—	
GND (injectors)	B134	7	0	0	—	
GND (ignition system)	B134	27	0	0	—	
GND (power supply)	B134	8	0	0	—	
GND (control systems)	B136	21	0	0	—	
	B136	22	0	0	—	
GND (oxygen sensor heater 1)	B134	35	0	0	—	
GND (oxygen sensor heater 2)	B134	34	0	0	—	

MEMO:

**B: ENGINE CONTROL MODULE (ECM) I/O SIGNAL FOR AT VEHICLES**

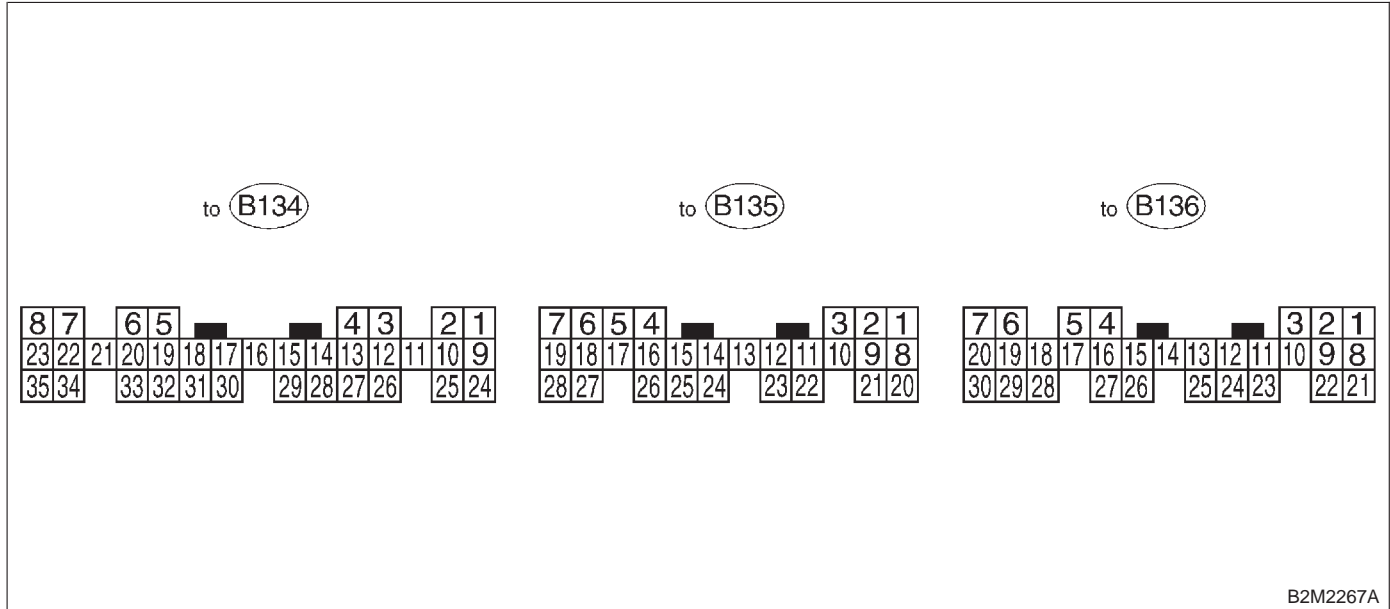

B2M2267A

Content		Connector No.	Terminal No.	Signal (V)		Note
				Ignition SW ON (Engine OFF)	Engine ON (Idling)	
Crankshaft position sensor	Signal (+)	B135	1	0	-7 — +7	Sensor output waveform
	Signal (-)	B135	8	0	0	—
	Shield	B135	10	0	0	—
Camshaft position sensor	Signal (+)	B135	2	0	-7 — +7	Sensor output waveform
	Signal (-)	B135	9	0	0	—
	Shield	B135	10	0	0	—
Throttle position sensor	Signal	B136	17	Fully closed: 0.2 — 1.0 Fully opened: 4.2 — 4.7		—
	Power supply	B136	15	5	5	—
	GND (sensor)	B136	16	0	0	—
Rear oxygen sensor	Signal	B136	18	0	0 — 0.9	—
	Shield	B136	24	0	0	—
	GND (sensor)	B136	16	0	0	—
Front oxygen (A/F) sensor heater	Signal 1	B134	22	0 — 1.0	0 — 1.0	—
	Signal 2	B134	23	0 — 1.0	0 — 1.0	—
Rear oxygen sensor heater signal		B134	21	0 — 1.0	0 — 1.0	—
Engine coolant temperature sensor	Signal	B136	14	1.0 — 1.4	1.0 — 1.4	After warm-up the engine.
	GND (sensor)	B136	16	0	0	After warm-up the engine.
Vehicle speed signal		B135	24	0 or 5	0 or 5	"5" and "0" are repeatedly displayed when vehicle is driven.
Starter switch		B135	28	0	0	Cranking: 8 — 14
A/C switch		B135	27	ON: 10 — 13 OFF: 0	ON: 13 — 14 OFF: 0	—
Ignition switch		B135	7	10 — 13	13 — 14	—

Content	Connector No.	Terminal No.	Signal (V)		Note	
			Ignition SW ON (Engine OFF)	Engine ON (Idling)		
Neutral position switch	B135	26	ON: 0 OFF: 12±0.5		Switch is ON when shift is in "N" or "P" position.	
Test mode connector	B135	14	5	5	When connected: 0	
Knock sensor	Signal	B136	4	2.8	—	
	Shield	B136	25	0	—	
Back-up power supply	B136	9	10 — 13	13 — 14	Ignition switch "OFF": 10 — 13	
Control unit power supply	B136	1	10 — 13	13 — 14	—	
	B136	2	10 — 13	13 — 14	—	
Sensor power supply	B136	15	5	5	—	
Line end check 1	B135	20	0	0	—	
Ignition control	#1, #2	B134	25	0	1 — 3.4	Waveform
	#3, #4	B134	26	0	1 — 3.4	Waveform
Fuel injector	#1	B134	4	10 — 13	1 — 14	Waveform
	#2	B134	13	10 — 13	1 — 14	Waveform
	#3	B134	14	10 — 13	1 — 14	Waveform
	#4	B134	15	10 — 13	1 — 14	Waveform
Idle air control solenoid valve	Signal 1	B134	5	—	1 — 13	Waveform
	Signal 2	B134	6	—	1 — 13	Waveform
	Signal 3	B134	19	—	1 — 13	Waveform
	Signal 4	B134	20	—	1 — 13	Waveform
	Power supply	B136	2	10 — 13	13 — 14	—
Fuel pump relay control	B134	16	ON: 0.5, or less OFF: 10 — 13	0.5, or less	—	
A/C relay control	B134	17	ON: 0.5, or less OFF: 10 — 13	ON: 0.5, or less OFF: 13 — 14	—	
Radiator fan relay 1 control	B134	3	ON: 0.5, or less OFF: 10 — 13	ON: 0.5, or less OFF: 13 — 14	—	
Radiator fan relay 2 control	B134	2	ON: 0.5, or less OFF: 10 — 13	ON: 0.5, or less OFF: 13 — 14	With A/C vehicles only	
Self-shutoff control	B135	19	10 — 13	13 — 14	—	
Malfunction indicator lamp	B134	11	—	—	Light "ON": 1, or less Light "OFF": 10 — 14	
Engine speed output	B134	30	—	0 — 13, or more	Waveform	
Torque control 1 signal	B135	16	5	5	—	
Torque control 2 signal	B135	17	5	5	—	
Torque control cut signal	B134	31	8	8	—	
Purge control solenoid valve	B134	2	ON: 1, or less OFF: 10 — 13	ON: 1, or less OFF: 13 — 14	—	
Atmospheric pressure sensor	Signal	B136	29	3.9 — 4.1	2.0 — 2.3	—
	Power supply	B136	15	5	5	
	GND (sensor)	B136	16	0	0	
Fuel temperature sensor	B136	26	2.5 — 3.8	2.5 — 3.8	Ambient temperature: 25°C (75°F)	
Fuel level sensor	B136	27	0.12 — 4.75	0.12 — 4.75	—	

Content		Connector No.	Terminal No.	Signal (V)		Note
				Ignition SW ON (Engine OFF)	Engine ON (Idling)	
Fuel tank pressure sensor	Signal	B136	12	2.3 — 2.7	2.3 — 2.7	The value obtained after the fuel filler cap was removed once and recapped.
	Power supply	B136	15	5	5	—
	GND (sensor)	B136	16	0	0	—
Fuel tank pressure control solenoid valve	B134	1	ON: 1, or less OFF: 10 — 13	ON: 1, or less OFF: 13 — 14	—	
Drain valve	B134	10	ON: 1, or less OFF: 10 — 13	ON: 1, or less OFF: 13 — 14	—	
AT diagnosis input signal	B135	4	Less than 1 ←→ More than 4	Less than 1 ←→ More than 4	Waveform	
Small light switch	B136	3	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	—	
Blower fan switch	B136	30	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	—	
Rear defogger switch	B135	21	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	—	
Front oxygen (A/F) sensor signal 1	B136	19	2.8 — 3.2	2.8 — 3.2	—	
Front oxygen (A/F) sensor signal 2	B136	6	2.4 — 2.7	2.4 — 2.7	—	
Front oxygen (A/F) sensor signal 3	B136	7	0.2 — 4.9	0.2 — 4.9	—	
Front oxygen (A/F) sensor signal 4	B136	20	0.2 — 4.9	0.2 — 4.9	—	
Pressure sensor	B136	5	2.4 — 4.8	0.4 — 1.8	—	
Intake air temperature sensor	B136	13	2.3 — 2.5	1.4 — 1.6	—	
SSM/GST communication line	B135	3	Less than 1 ←→ More than 4	Less than 1 ←→ More than 4	—	
GND (sensors)	B136	16	0	0	—	
GND (injectors)	B134	7	0	0	—	
GND (ignition system)	B134	27	0	0	—	
GND (power supply)	B134	8	0	0	—	
GND (control systems)	B136	21	0	0	—	
	B136	22	0	0	—	
GND (oxygen sensor heater 1)	B134	35	0	0	—	
GND (oxygen sensor heater 2)	B134	34	0	0	—	

**C: ENGINE CONDITION DATA**


Content	Specified data
Engine load	1.6 — 2.9 (%): Idling
	6.4 — 12.8 (%): 2,500 rpm racing

Measuring condition:

- After warm-up the engine.
- Gear position is in “N” or “P” position.
- A/C is turned OFF.
- All accessory switches are turned OFF.



D: TRANSMISSION CONTROL MODULE (TCM) I/O SIGNAL

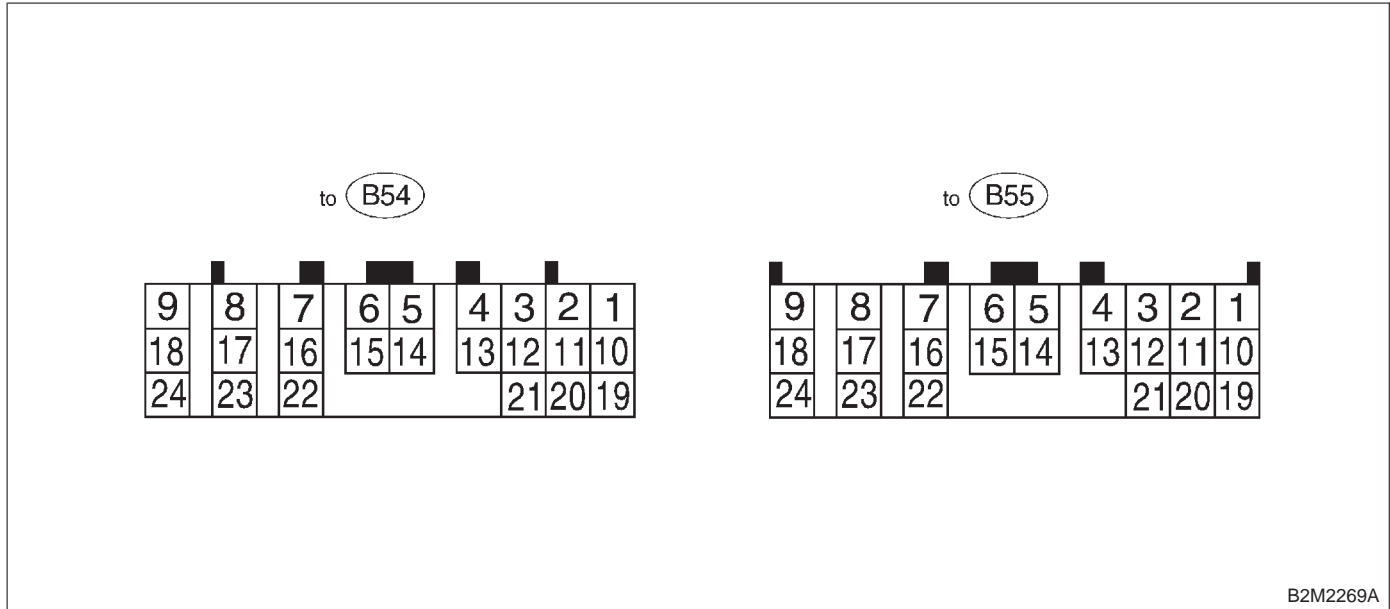

B2M2269A

NOTE:  
Check with ignition switch ON.

Content		Connector No.	Terminal No.	Measuring conditions	Voltage (V)
Back-up power supply		B55	6	Ignition switch OFF	10 — 16
Ignition power supply		B54	23	Ignition switch ON (with engine OFF)	10 — 16
		B54	24		
Inhibitor switch	“P” range switch	B55	23	Selector lever in “P” range	Less than 1
				Selector lever in any other than “P” range	More than 8
	“N” range switch	B55	22	Selector lever in “N” range	Less than 1
				Selector lever in any other than “N” range	More than 8
	“R” range switch	B55	17	Selector lever in “R” range	Less than 1
				Selector lever in any other than “R” range	More than 9.5
	“D” range switch	B55	8	Selector lever in “D” range	Less than 1
				Selector lever in any other than “D” range	More than 9.5
	“3” range switch	B55	18	Selector lever in “3” range	Less than 1
				Selector lever in any other than “3” range	More than 9.5
	“2” range switch	B54	10	Selector lever in “2” range	Less than 1
				Selector lever in any other than “2” range	More than 9.5
	“1” range switch	B54	1	Selector lever in “1” range	Less than 1
				Selector lever in any other than “1” range	More than 9.5
Brake switch	B55	24	Brake pedal depressed	More than 10.5	
			Brake pedal released	Less than 1	
ABS signal	B54	19	ABS switch ON	Less than 1	
			ABS switch OFF	More than 6.5	

Content	Connector No.	Terminal No.	Measuring conditions	Voltage (V)	Resistance to body (ohms)
Throttle position sensor	B55	1	Throttle fully closed.	0.3 — 0.7	—
			Throttle fully open.	4.3 — 4.9	
Throttle position sensor power supply	B55	2	Ignition switch ON (with engine OFF)	4.8 — 5.3	—
ATF temperature sensor	B55	11	ATF temperature 20°C (68°F)	2.9 — 4.0	2.1 k — 2.9 k
			ATF temperature 80°C (176°F)	1.0 — 1.4	275 — 375
Vehicle speed sensor 1	B55	3	Vehicle stopped.	0	450 — 650
			Vehicle speed at least 20 km/h (12 MPH)	More than 1 (AC range)	
Vehicle speed sensor 2	B55	5	Vehicle speed at most 10 km/h (6 MPH)	Less than 1 ← → More than 4	—
Torque converter turbine speed sensor	B55	12	Vehicle stopped.	0	450 — 650
			Vehicle speed at least 20 km/h (12 MPH)	More than 1 (AC range)	
Vehicle speed output signal	B55	13	Vehicle speed at most 10 km/h (6 MPH)	Less than 1 ← → More than 4	—
Engine speed signal	B55	4	Ignition switch ON (with engine OFF).	More than 10.5	—
			Ignition switch ON (with engine ON).	8 — 11	
Cruise set signal	B54	11	When cruise control is set (SET lamp ON).	Less than 1	—
			When cruise control is not set (SET lamp OFF).	More than 6.5	
Torque control 1 signal	B54	13	Ignition switch ON (with engine ON)	More than 9	—
Torque control 2 signal	B54	21	Ignition switch ON (with engine ON)	More than 9	—
Torque control cut signal	B54	2	Ignition switch ON	8	—
AT load signal	B55	20	Engine idling after warm-up	1.2 — 1.8	—
Shift solenoid 1	B54	7	1st or 4th gear	More than 9	10 — 16
			2nd or 3rd gear	Less than 1	
Shift solenoid 2	B54	6	1st or 2nd gear	More than 9	10 — 16
			3rd or 4th gear	Less than 1	
Line pressure duty solenoid	B54	9	Throttle fully closed (with engine OFF) after warm-up.	1.5 — 4.0	2.0 — 4.5
			Throttle fully open (with engine OFF) after warm-up.	Less than 0.5	
Dropping resistor	B54	18	Throttle fully closed (with engine OFF) after warm-up.	More than 8.5	9 — 15
			Throttle fully open (with engine OFF) after warm-up.	Less than 0.5	
Lock-up duty solenoid	B54	16	When lock up occurs.	More than 8.5	10 — 17
			When lock up is released.	Less than 0.5	
Transfer duty solenoid	B54	15	Fuse on FWD switch	More than 8.5	10 — 17
			Fuse removed from FWD switch (with throttle fully open and with select lever in 1st gear).	Less than 0.5	

Content	Connector No.	Terminal No.	Measuring conditions	Voltage (V)	Resistance to body (ohms)
2-4 brake duty solenoid	B54	8	Throttle fully closed (with engine OFF) after warm-up.	1.5 — 4.0	2.0 — 4.5
			Throttle fully open (with engine OFF) after warm-up.	Less than 0.5	
2-4 brake duty solenoid resistor	B54	17	Throttle fully closed (with engine OFF) after warm-up.	More than 8.5	9 — 15
			Throttle fully open (with engine OFF) after warm-up.	Less than 0.5	
2-4 brake timing solenoid	B54	5	3rd gear	More than 9	10 — 16
			1st gear	Less than 1	
Low clutch timing solenoid	B54	14	2nd gear	Less than 1	10 — 16
			4th gear	More than 9	
Sensor ground line 1	B55	10	—	0	Less than 1
Sensor ground line 2	B55	21	—	0	Less than 1
System ground line	B55	9	—	0	Less than 1
		19			
FWD switch	B55	14	Fuse removed.	6 — 9.1	—
			Fuse installed.	Less than 1	
FWD indicator lamp	B54	12	Fuse on FWD switch	Less than 1	—
			Fuse removed from FWD switch.	More than 9	
Data link signal (Subaru Select Monitor)	B55	7	—	—	—
		16	—	—	
AT diagnosis signal	B54	4	Ignition switch ON	Less than 1 ↔ More than 4	—